

Consoles and control units

EV 430 PROX	  CODES  RFID READER  COLOR DISPLAY 4.3"  CAPACITIVE TOUCH SCREEN  VOICE SYNTHESIS  6 PROGRAMS MANAGED  SECURITY GRADE 2  CLASS II GENERAL INDOOR
	Console with TFT 4.3" capacitive touch screen and integrated RFID reader - RS485 connection - Signal LED and acoustic signaling device - Interactive and intuitive graphic interface with icons contextual to system status - Help function - Free program association - Graphic themes programmable by the user - Integrated RSC® technology: remote programming and management - Anti-tamper protection: anti-opening/antidetachment, code error, serial bus sabotage - Surface mounting - Environmental class II (indoor general) - Ultra-thin ASA casing
	Item no. F127EV430PROX (white) - Please refer to the Sales Department
	Item no. F127EV430PROXG (gray) - Please refer to the Sales Department

Consoles and control units

EV 430 PROX - Technical and functional specifications

General features	Type	EV 430 PROX
	RFID reader	Integrated
	Connection	RS485 Serial Bus
User interface	Display	TFT 4.3" colors
	Resolution	480 x 272px
	Touch screen	Capacitive
	Infographics	Icons contextual to system status
	Voice synthesis	✓
	Speaker	✓
	Buzzer signals	✓
	Programs managed	6
	Remote controls managed	6
	Thermostats management	✓
Anti-tamper protection	Anti-opening/anti-detachment	Micro-switch
	Serial bus sabotage	Electronic
	Code error	Electronic
Electrical specifications	Operating voltage	10.5...14V DC
	Stand-by consumption	50mA @ 13.8V DC
	Max. consumption	130mA @ 13.8V DC
Physical specifications	Environmental class	II
	Protection class	IP4x-IPK04
	Casing	ASA
	Dimensions (L x H x D)	154 x 104.6 x 23mm
	Weight	230g
Conformity	Standards	EN 50131-1 EN 50131-3
	Security grade	2
	Notified body	Pending

evolution

EV 430 PROX - ACCESSORIES

	EV KEY
	High security transponder for the Evolution series RFID readers - Unique non-duplicable nor reprogrammable code - ABS casing - Design by Pininfarina - Gray
Item no. F103EVKEY	

PROGRAMMING - UTS 430 PROX

Zones	Zones - Functions	Zones - Programs	Zones - Options	Consoles	Options	Outputs

Configuration

Consoles

Console 1

Quick arming ☐  EN 50131

Quick disarming ☐  EN 50131

Panic ☐

Shortcut menu remotes ☐

Shortcut menu thermostats ☐

Thermostat associated

Audio always ☐

Universal ☐

Tamper Disabling ☐  EN 50131

Deactivate buzzer ☐

Chime ☒

Buzzer signals ☐

Volume

Backlight Modes

Graphic display ☐

Show temperature next thermostat ☐

Use local settings ☐

Memos

Deactivation level

1

2

Custom splash info

View for

OK Abandon ?

Note: Programming not allowed for EV 4-24 4G EN version in compliance with EN 50131 standards

Note: Disabling not allowed for EV 4-24 4G EN version in compliance with EN 50131 standards

Console 1

1 - Console selection

Click on the drop-down menu, and choose the identifier of the console you want to program.



EN 50131

Quick arming ☐

Note: Programming not allowed for EV 4-24 4G EN version in compliance with EN 50131 standards

2 - Quick arming

Enabling the quick arming function.
Method: press the "Program number (P1... P6)" + "YES button".



EN 50131

Quick disarming ☐

Note: Programming not allowed for EV 4-24 4G EN version in compliance with EN 50131 standards

3 - Quick disarming

Enabling the quick disarming function.
Method: press the "Program number (P1... P6)" + "YES button".

Panic ☐

4 - Panic

Enables the console for panic alarm generation.
According to the implementation methods provided by the console.

Shortcut menu remotes ☐

5 - Shortcut menu remotes

If enabled, it allows the activation/deactivation of the remote controls, without the need to enter the code.

Shortcut menu thermostats ☐**6 - Shortcut menu thermostats**

If enabled, the user can modify the intervention threshold of the thermostats, without typing the code.

Thermostat associated None ▼**7 - Thermostat associated**

The drop-down menu allows you to select the associated thermostat (displayed on the keyboard).

Audio always ☐**8 - Audio always**

Enables the console to always play messages and sound effects, even for operations performed on other consoles.

Universal ☐**9 - Universal**

Enables the console to arm and disarm all programs associated with the code, even if the program is not displayed by the LEDs.
In this case the arming/disarming is shown on the display.



Note: Disabling not allowed for EV 4-24 4G EN version in compliance with EN 50131 standards

Tamper Disabling ☐**10 - Tamper Disabling**

Deactivates the 24H tamper protection of the console.

Deactivate buzzer ☐Chime ☐Buzzer signals ☐**11 - Deactivate buzzer**

Deactivates the Buzzer operation.

Note: it also deactivates the sound linked to button pressing.

Chime - Enables/disables the console as a signalling device for the Chime function.

Buzzer signals - Enables/disables the keypad buzzer when signaling events: Exit time, Entry time, Alarm time, Partialization end warning, Auto-arming warning. General enabling for reporting these events must be activated in the Options menu.

Volume MUTE ▼**12 - Volume**

Programming the volume for playing voice messages.

Backlight Modes Automatic (Default) ▼**13 - Backlight Modes**

Operating mode of the display backlight.

Automatic (Default)	Switching on and light intensity automatically adjusted according to the ambient light
Always on	Always on, with favourable ambient light, light intensity and consumption reduced to a minimum
Always off	Backlight always off (deactivated)
Manual	With unfavourable ambient light, typing a button activates the backlight for two minutes
Manual always on	Always on with minimum light intensity, pressing a button activates the backlight for two minutes

Graphic display ☒

Show temperature next thermostat ☐

Use local settings ☐

Note: these programming parameters are only valid for Touch Screen keyboards

The "Use local parameters" option disables the programming of the Volume and Backlight modes

14 - Graphic display

Warning: the "Graphic display" option must be enabled for all Touch screen keyboards.

Show temperature next thermostat

Normally the keyboard displays the temperature of the associated thermostat. With this option enabled, the keyboard also displays the temperature detected by the thermostat that has not been associated with the keyboard.

Use local settings

With this option enabled, the user can operate on the keyboard to adjust or modify some operating parameters:

- Adjust the sound diffusion volume
- Adjust the backlight mode and level
- Change the settings of the screen saver function

P1 Prog. 1

P2 Prog. 2

P3 Prog. 3

P4 Prog. 4

P5 Prog. 5

P6 Null

Null

Prog. 1

Prog. 2

Prog. 3

15 - LED for signalling program status

The EV LCD console is equipped with 6 buttons with which it is possible to directly manage the activation and deactivation of the respective operating programs. Each button is equipped with a pair of LEDs that display the operating status of the associated program.

By clicking on the drop-down menu, you can change the program associated with the button or disable the operation of the button by clicking on the Null option.

To disable the operation of the button click on the Null option

Memos

Deactivation level

1 Master code Warranty expiration

2 Installer code Replace batteries

16 - Memos

It is possible to program 2 messages consisting of two lines of 16 characters. The messages will be displayed by all the consoles on the date scheduled on the control panel calendar, messages can be viewed several times during the year.

To program the display date, see the paragraphs "Customisation year 1... 2" and "Cyclic timers".

Deactivation priority. The displayed message will be deleted only by recognition of the code specified in the "Deactivation level" field.

Custom splash info

View for

Disabled

17 - Custom splash info

The console can display a message consisting of two lines for a total of 40 characters at the user's request.

The display of the message can be disabled.

To view the message you need to press the MEM button.





The display time is programmable.

OK Abandon

The Consoles menu has been completed, press:

OK to confirm and quit
Abandon to quit without saving

1 - INSTALLATION

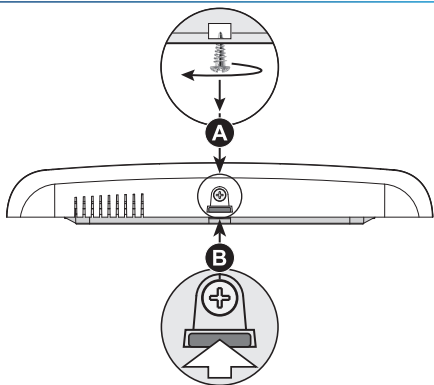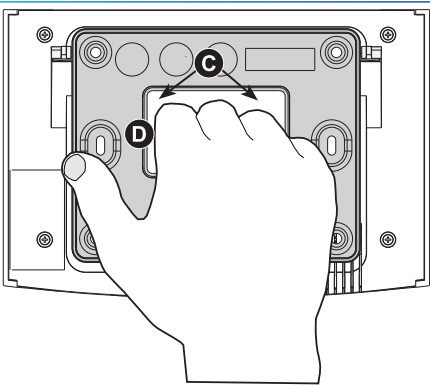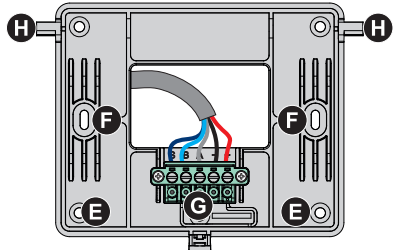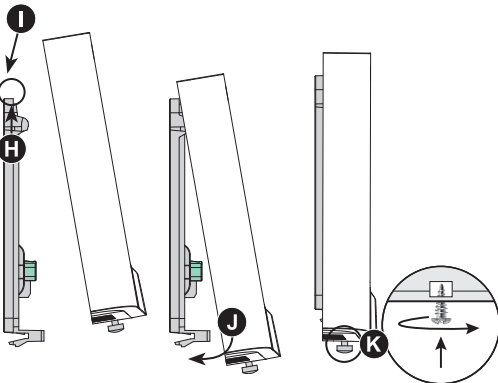
	
A Unscrew the screw that connects the panel to the frame	C Put your fingers inside the window in the middle of the frame
B Push the locking hook to release the frame	D Hold the frame and lift your fingers to release it
	
E Fixing holes for dowels	I Fasten the panel onto the frame pins
F Fixing slots for recessed box 503	J Rotate and push the panel towards the frame
G Connect the cable to the terminal block	K Screw in the locking screw
H Panel coupling pins	

2 - CONNECTION

Connection - The console must be connected in series to the RS485 Serial Bus of the control unit using a cable of appropriate cross section. When evaluating the cable cross section, it is essential to take into account the length of the serial line and the total consumption of the connected devices.

Line balancing - If the console is the last device connected on the serial line, a 150Ω resistor must be connected in parallel to terminals A and B.

Terminal block			Note
1	S	Input audio channel	Vocal
2	B	Channel B Serial Bus	Serial data
3	A	Channel A Serial Bus	Serial data
4	-	Negative power supply voltage for Serial Bus	-
5	+	Positive power supply voltage for Serial Bus	+12V DC

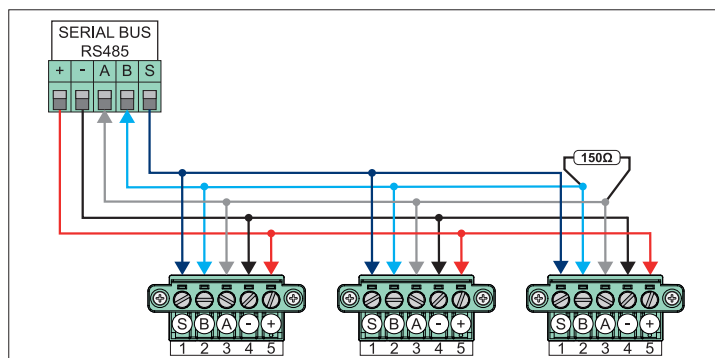

3 - ADDRESS PROGRAMMING

Open the drop-down menu


 Enter the settings with
the installer code



Program the address

To program the address of the console, tap the ON/OFF keys or on the arrows.

To save the address the console requires the installer code.

Note

For Graphical display consoles, it is recommended to program low addresses, reserving the highest addresses for any standard consoles.

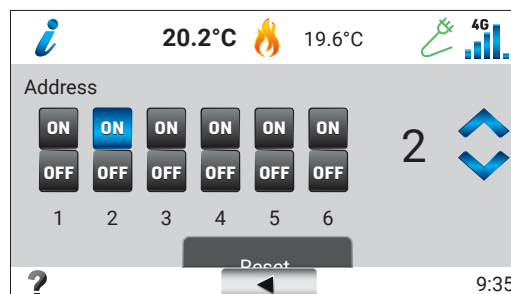

4 - ENABLING THE GRAPHIC DISPLAY



The “Graphic display” can be enabled with the Centro program, from the console programming screen.

 Graphic display ☒

14 - Graphic display

Or the “Graphic display” can be enabled directly from the console, with the following procedure.

Open the drop-down menu

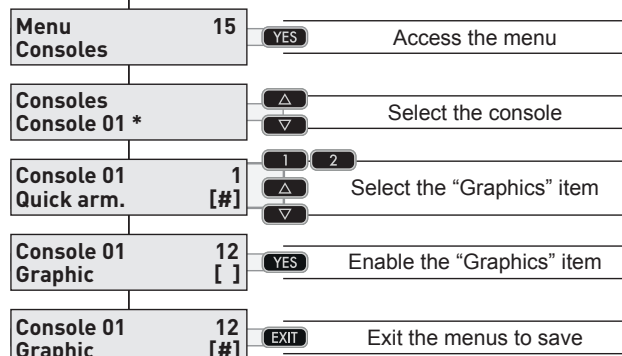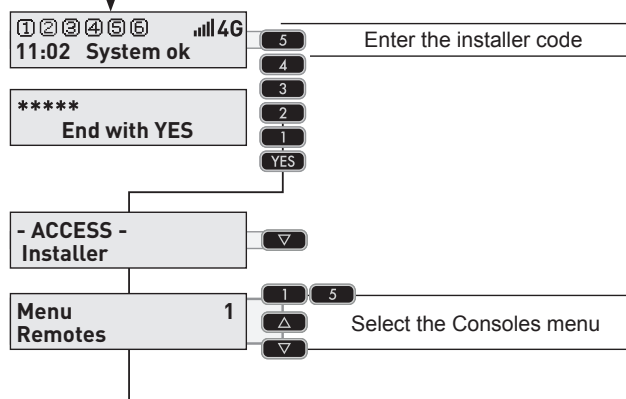
 Enter the EV LCD
console emulator


5 - GENERAL CONSOLE STATUS ICONS



The table lists the functional states in which the normal operation of the console is interrupted. In some states it is still possible to open the dropdown menu and access the allowed functions.

	No serial communication Contact your installer.
	Active console fault. Contact your installer. In this condition, no function can be accessed.
	Synchronisation is in progress. Wait for synchronisation to end.
	Wrong code or key. Wait for the console to unlock before logging in again.
	Control panel in maintenance. The System is under maintenance, it is possible to operate only on the console from which it was accessed via installer code.

6 - PROGRAM STATUS SIGNALING

EV 430 PROX console

Panel A - The status of the programs is shown in the centre of the display by six icons that change colour depending on the program status.




PROGRAM STATUS ICONS			
	Grey Program not inserted		Flashing yellow Program being inserted/partial
	Yellow Program Inserted		Red Alarm in memory
	Yellow and flashing red Program inserted Alarm in progress		Yellow and red Program inserted Alarm in memory
	Flashing yellow and red Partial program Alarm in progress		Red and flashing yellow Program being inserted/partial with Alarm in memory
Blink - Indicates the colour of the flashing			

7 - USER MANAGEMENT

The EV 430 PROX console lets you manage the operating programs of the System, interact with the remote controls and thermostats, and access the consultation and programming menus of the System reserved for the user. In standby the console displays the time, date and temperatures in a low light, touch the display to access console information and functions.

System information and functions are displayed with icons in three areas, which can be seen in boxes **A**, **B**, **C**.

The console comes with an integrated RFID key reader; keys allow you to insert, disconnect and make partial System programs.

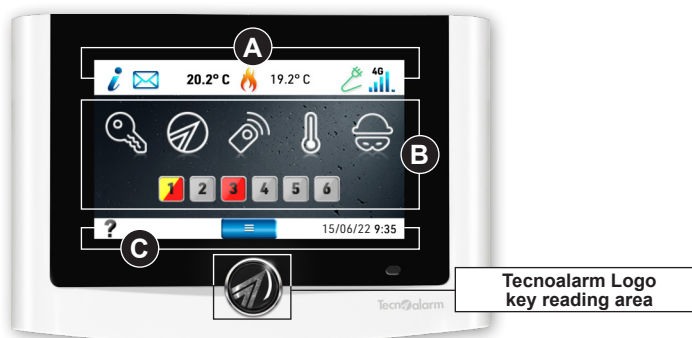

BOX A									
		Information on System status. Tap to enter the page that displays System information. - The page displays the detail icons and, if programmed by the installer, the splash info message. - When there is new information, the Alert icon replaces the Default icon.							
		DETAIL ICONS							
		Notifications can be filtered by selecting and deselecting detail icons.							
		Zone alarm status		Tamper alarm		Anomalies / Faults Status		Isolated zones and/or devices	
		Information messages. The icon shows there is a message (if programmed by the installer). Tap the icon to view the message.							
20.2°C 		THERMOSTAT STATUS ICONS							
			Thermostat: off (operation deactivated)		Thermostat: on Mode: Winter Control Output: ON		Thermostat: on Mode: Winter Control Output: OFF		Thermostat: on Mode: Summer Control Output: ON
			Thermostat: on Mode: Summer Control Output: OFF		Thermostat: on Mode: Anti-freeze Control Output: ON		Thermostat: on Mode: Anti-freeze Control Output: OFF		Thermostat in block
19.6° C		Thermostat not associated with the console. The icon displays the temperature detected by the climate sensor not associated with the console.							
		MAINS POWER STATUS ICONS							
			Presence of mains power 230V AC.				No mains power 230V AC.		
		GSM Phone module information The icon indicates the mobile signal strength and network used. Tap the icon to display details on the phone module.							

BOX B



Arming / disarming programs.
Tap to display the program management keys. Insert or disable with option A or B

A - Arming / disarming. To insert or disable tap the program key. The console prompts you to type the code or recognise the key.

B - Quick arming / disarming. The feature must be enabled by the installer. To insert or disable tap the program key. In this case the console does not prompt you to type the code or recognise the key.



Displays the status of the zones associated with the programs.

- Tap to display the program keys.
- Tap the program key to view the status of the associated zones.



Activation /deactivation of remote controls.
Tap to view the remote controls. Activate or deactivate with option A or B.

A - Activation/deactivation. To activate or deactivate the remote control, tap the key. The console prompts you to type the code or recognise the key.

B - Quick activation/deactivation. The feature must be enabled by the installer. To activate or deactivate the remote control, tap the key. In this case the console does not prompt you to type the code or recognise the key.

REMOTE CONTROL STATUS ICONS



Grey

Remote Control disabled



Yellow

Remote Control enabled



Programming thermostats.
Tap to view the System thermostats. Enter with option A or B.

A - Thermostat menu. To access the menu, touch the thermostat key. The console asks you to type the code.

B - Quick thermostat menu. To access the menu, touch the thermostat key. The console does not ask you to type the code.



Panic alarm.
To activate the panic alarm, press the icon for 2 seconds.
The panic alarm function must be programmed by the installer.





8 - EV 430 PROX FIRMWARE UPDATE


The procedure allows you to update the firmware of the EV 430 PROX Console.

The console display is always off during the procedure

N.B. before proceeding, download the update file available on the website www.tecnoalarm.com.

To start the procedure, open the Centro program.

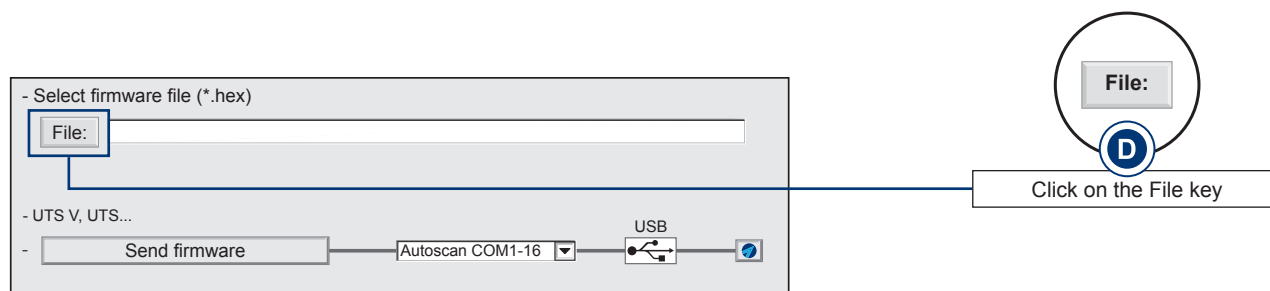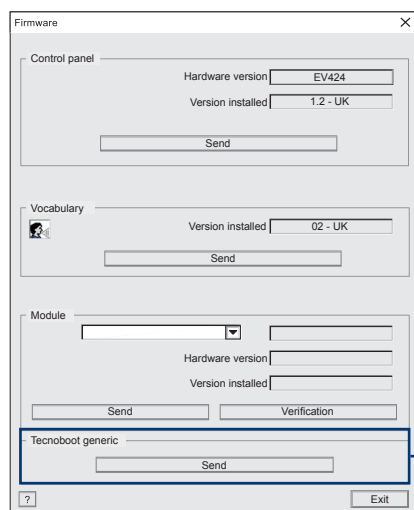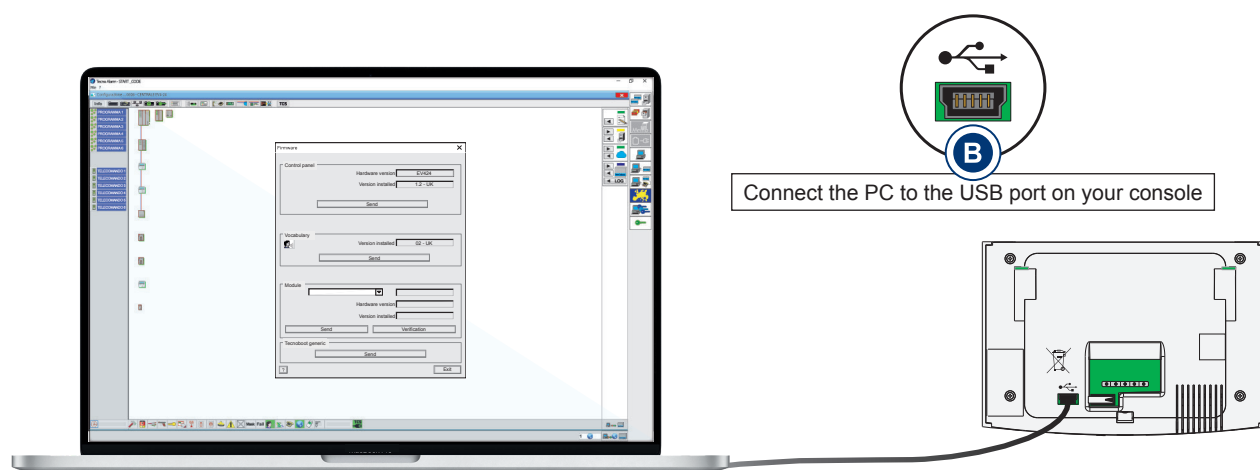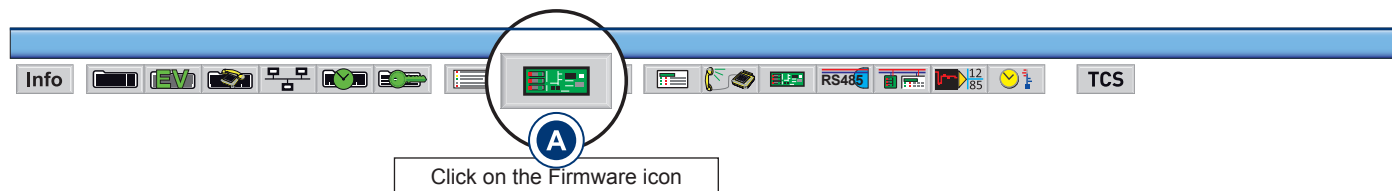

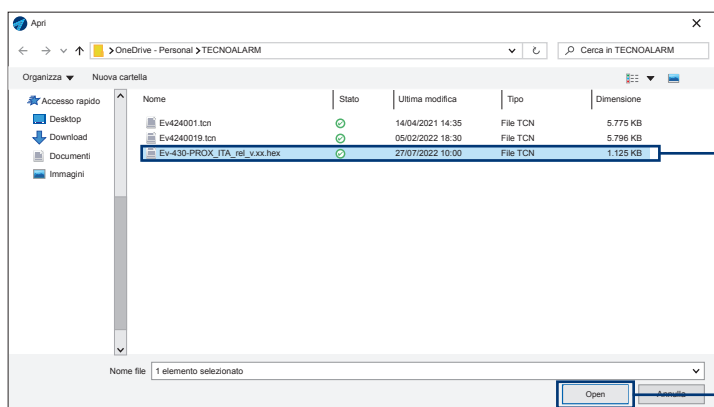

Ev-430-PROX


E

Select the firmware update file

Open

F


Click the Open key

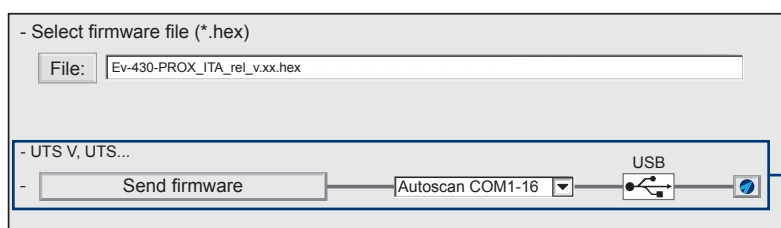

Send firmware

G

Locate the USB box and click the Enter Firmware key

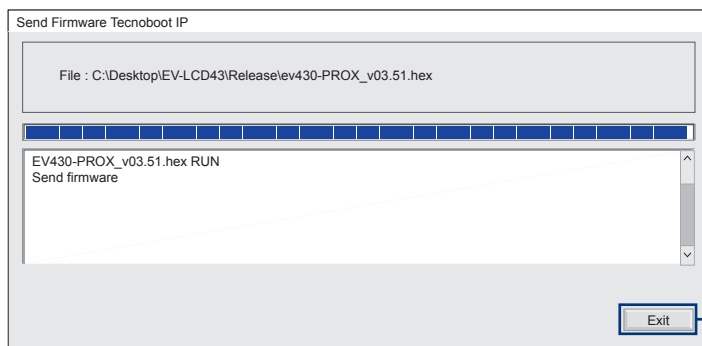

Exit

H

Wait for the procedure to complete and click on the Exit key

EV 430 PROX - COMPATIBILITY TABLE

Program Centro	Control panel firmware
	FW 1.5.00 >

Tecnalarm®

 Via Ciriè 38 - 10099 San Mauro T.se
 Torino (Italy) - Tel. +39 011 22 35 410
 info@tecnalarm.com - www.tecnalarm.com


Product characteristics may be subject to change without notice.