
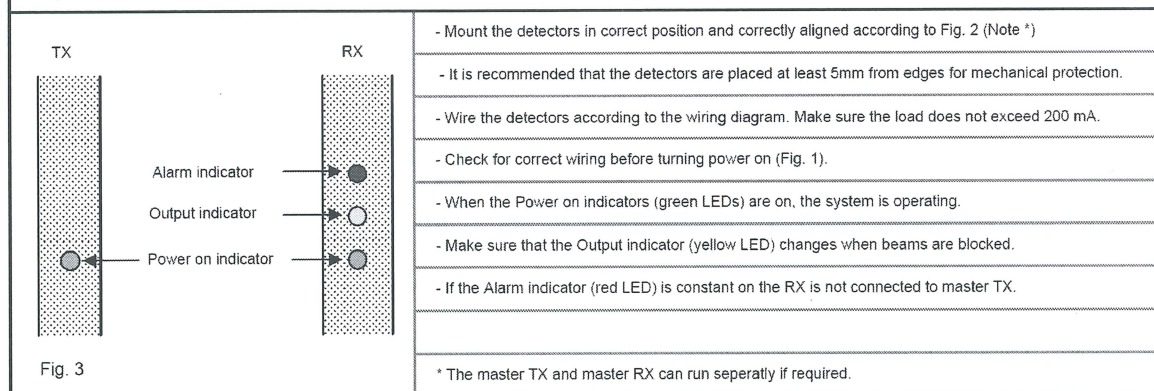
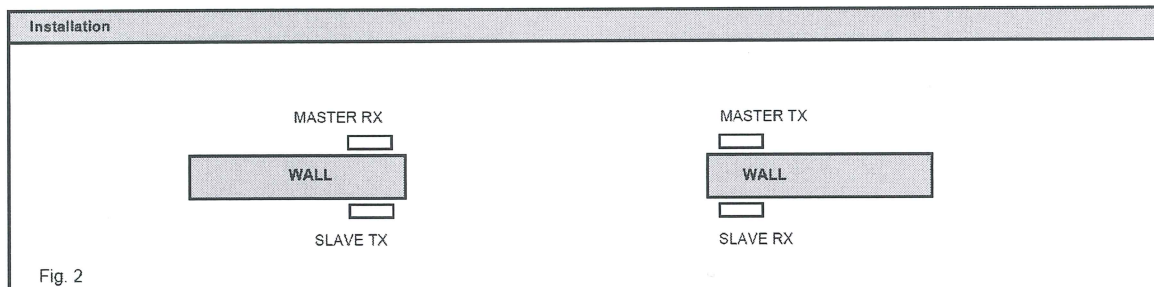


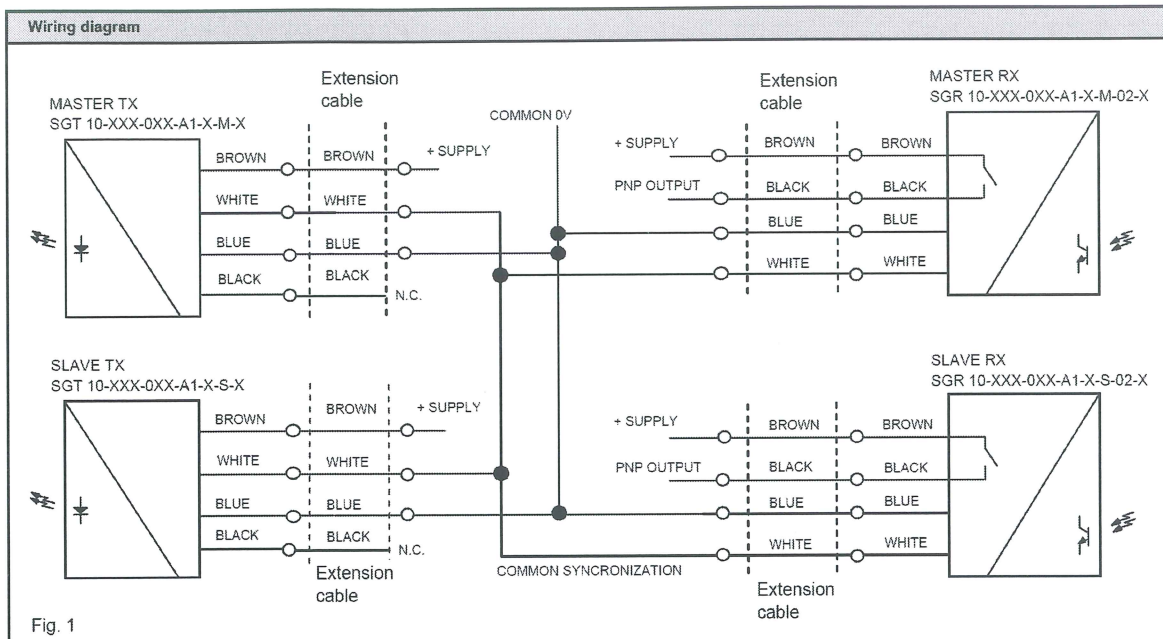

Troubleshooting		
Symptom	Probable Reason	Corrective Action
1. Alarm indicator on RX is constant on.	- Master TX is disabled - No synchronization signal	Check supply and cable to the master TX Connect RX to master TX
2. Output indicator is flashing.	- Severe electrical interference - Severe ambient light	Remove RX and TX supply cable from high voltage cables Change position of TX and RX
3. Yellow LED on RX is constant off.	- RX cannot see TX	Remove obstruction