

**DNAKE**



# User Manual

---

**DNAKE 280SD-C12**



## REMARK

---

Please follow the user manual for correct installation and testing. If there is any doubt please call our tech-supporting and customer center.

Our company applies ourselves to reformation and innovation of our products. No extra notice for any change. The illustration shown here is only for reference. If there is any difference, please take the actual product as the standard.

The product and batteries must be handled separately from household waste. When the product reaches the end of service life and needs to be discarded, please contact the local administrative department and put it in the designated collection points in order to avoid the damage to the environment and human health caused by any disposal. We encourage recycling and reusing the material resources.

# CATALOG

|                           |    |
|---------------------------|----|
| PRODUCT FEATURE .....     | 1  |
| TECHNICAL PARAMETER ..... | 1  |
| PACKAGE CONTENT .....     | 2  |
| OVERVIEW .....            | 3  |
| BASIC OPERATION .....     | 5  |
| WEB SETTING .....         | 6  |
| SYSTEM DIAGRAM .....      | 17 |
| DEVICE WIRING .....       | 18 |
| INSTALLATION .....        | 20 |
| TROUBLESHOOTING .....     | 22 |
| SAFETY INSTRUCTION .....  | 23 |

# PRODUCT FEATURE

---

1. Powered by PoE or power adapter (DC12V/2A)
2. Open the door by IC card (20,000 users)
3. Support SIP 2.0 protocol, easy integration with other SIP devices

# TECHNICAL PARAMETER

---

Power Supply: PoE (802.3af) or DC 12V/2A

Standby Power: 1.5 W

Rated Power: 3 W

Resolution: 1280 x 720

Working Temperature: -40°C to +55°C

Storage Temperature: -40°C to +70°C

Working Humidity: 10% to 90% (non-condensing)

# PACKAGE CONTENT

## MODEL: 280SD-C12 (Surface Mounting)



280SD-C12



PM4×20 (2 pcs)



FM5×5 (1 pcs)



Rear Cover



Wires



Quick Start Guide

## MODEL: 280SD-C12 (Flush Mounting)



280SD-C12



PM4×20 (4 pcs)



Rear Cover




Wires




Quick Start Guide

# OVERVIEW

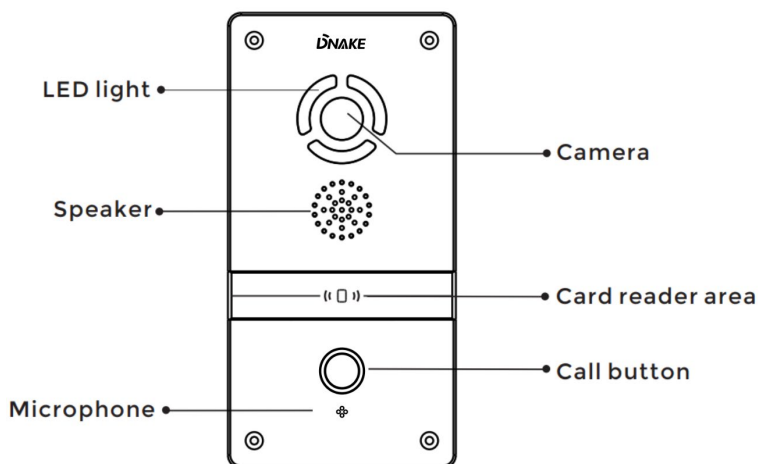

## 280SD-C12 Overview

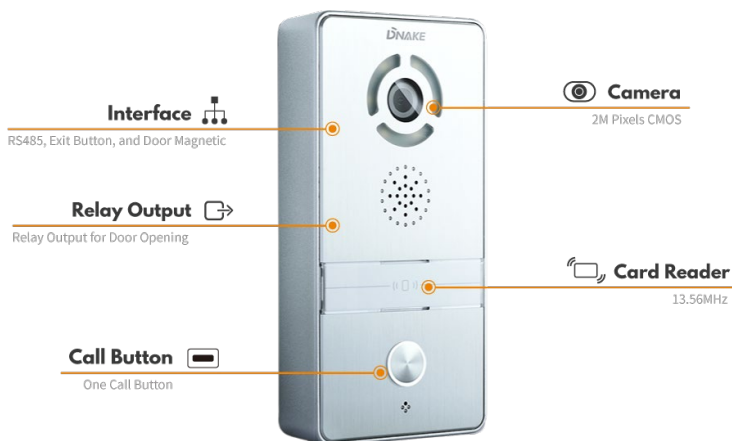

# BASIC OPERATION

## 1. Call and Monitor

### 1.1. Call Indoor Monitor

In standby mode, press button on Villa Station to call Indoor Monitor. During the call, press button on Villa Station again to end the call. If the call fails or Indoor Monitor is busy, Villa Station will make a beep sound.

### 1.2. Monitor Villa Station

Click Doors icon on Indoor Monitor's homepage to monitor Villa Station.

## 2. Add Cards by Admin Card

### 2.1. Add other cards

Step 1: Tap the admin card once;

Step 2: And then tap other cards immediately. Other cards you have tapped can be used to open the door;

Step 3: Tap the admin card again to finish.

### 2.2. Delete other cards one by one

Step 1: Tap the admin card twice;

Step 2: And then tap other cards immediately. Other cards you have tapped will be deleted;

Step 3: Tap the admin card again to finish.

### 2.3. Delete all other cards


Tap the admin card five times. All the other cards will be deleted.

**Tips:** The admin card can only be used to manage cards. It cannot be used to open the door.

# WEB SETTING

Connect Door Station and PC to a network switch in the same LAN. You can enter the IP address of Door Station in the web browser search bar and log in with the default account (admin) and password (123456). This is where you can configure the device.

To get the IP address, you can search by DNAKE Remote Upgrade Tool installed in the same LAN with the devices.

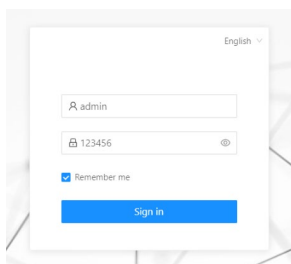

## 1. General

### 1.1. General > Information

When you first log in to the web interface, you can find basic information displayed in this dashboard.

**DNAKE**

English ▾ Hello, admin ▾

General ▾

Information

Basic

Time

Password

System

Intercom ▾

Device

Network

SIP

Ring Group

Access ▾

Access Control

Person

Advanced ▾

Video

More

Product

|           |                |                  |                           |             |                  |
|-----------|----------------|------------------|---------------------------|-------------|------------------|
| Model     | 280SD-C12      | Firmware Version | 280D.1.1.3.14_GA_20221117 | MAC Address | BCF8:11:0D:B9:8C |
| Framework | 1.6.0 20221109 | UI               | 1.3.11 20221116           | MCU         | 1.6.3            |

Network

|         |             |            |                |      |               |
|---------|-------------|------------|----------------|------|---------------|
| DHCP    | Enabled     | IP Address | 192.168.0.101  | Mask | 255.255.255.0 |
| Gateway | 192.168.0.1 | DNS        | 192.168.98.198 |      |               |


SIP Account

|         |      |        |          |
|---------|------|--------|----------|
| Account | None | Status | Disabled |
| CMS IP  | None | Status | Disabled |

|                   |                                           |
|-------------------|-------------------------------------------|
| Model:            | Model of the device;                      |
| Firmware Version: | Firmware version of the device;           |
| MAC Address:      | MAC address of the device;                |
| Framework:        | Framework of the device;                  |
| UI:               | UI of the device;                         |
| DHCP:             | Status of DHCP;                           |
| IP Address:       | Current IP address of the device;         |
| Mask:             | Subnet mask of the device;                |
| Gateway:          | Gateway of the device;                    |
| DNS:              | Domain Name Server of the device;         |
| Account:          | SIP account of the device;                |
| Status:           | Status of SIP registration of the device; |
| CMS IP:           | IP address of CMS;                        |
| Status:           | Status of CMS registration;               |

### 1.2. General > Basic

Language, resolution and volume of the device can be configured in this column.

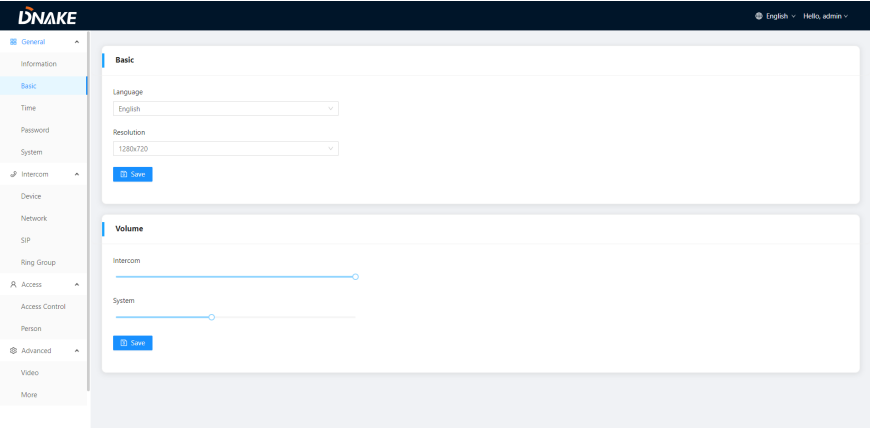

|             |                                                                                                                                                                       |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Language:   | 16 languages supported (简体中文, English, 繁體中文, עברית, Deutsch, Español, Türk, Tiếng Việt, Nederlands, Português, Polski, Русский, عربي, Français, Italiano, slovenský); |
| Resolution: | 3 resolutions supported (320 × 240, 640 × 480, 1280 × 720);                                                                                                           |
| Intercom:   | Volume of Intercom can be set from 1 to 6;                                                                                                                            |
| System:     | Volume of System can be set from 1 to 6;                                                                                                                              |

### 1.3. General > Time


Time of the device can be configured. Daylight Saving Time is also supported.

|                       |                                                                              |
|-----------------------|------------------------------------------------------------------------------|
| Auto (Time):          | Enable to synchronize computer time;                                         |
| Date&Time:            | Date and time can be set manually;                                           |
| NTP URL:              | Network Time Protocol (NTP) is a protocol used to synchronize computer time; |
| Time Zone:            | A region that observes a uniform standard time;                              |
| Daylight-saving Time: | Enable to set DST;                                                           |
| Start Time:           | The beginning of DST;                                                        |
| End Time:             | The ending of DST;                                                           |
| Offset Time:          | The default value is 60 minutes;                                             |

### 1.4. General > Password

The Web password is for the administrator to log in settings on the web. The default password is 123456.



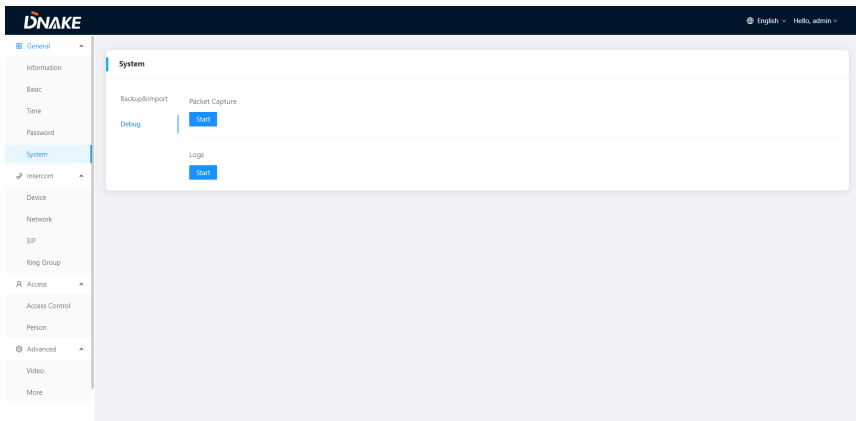

|                 |                                                                       |
|-----------------|-----------------------------------------------------------------------|
| Backup&Restore: | Backup all setting and restore settings;                              |
| Upgrade:        | Upgrade equipment;                                                    |
| Reset:          | Reset to factory settings;                                            |
| Reboot:         | Reboot the device;                                                    |
| Packet Capture: | Capturing packets can help developers reproduce positioning problems; |
| Logs:           | Device logs;                                                          |

## 2. Intercom

### 2.1. Intercom > Device

Numbers here are basic settings for making a call to Indoor Monitor. For Door Station, the building and unit number should be the same as those in Indoor Monitor. For Villa Station with one button, the building, unit, and room number should be the same as those in Indoor Monitor.

The device number here is to distinguish different Door Stations when more than one Door Station is in one building.

General

Information

Basic

Time

Password

System

Intercom

Device

Network

SIP

Ring Group

Access

Access Control

Person

Advanced

Video

More

English

Hello, admin

Device

Building

1

Unit

1

Room

1111

Device No.

1

Save

|            |                                        |
|------------|----------------------------------------|
| Building:  | Number of the building (Range: 1-999); |
| Unit:      | Number of the unit (Range: 1-99);      |
| Room:      | Number of the room (Range: 0-9899);    |
| Device No: | Number of the device (Range: 1-9);     |

2.2. Intercom > Network

The device network can be set to either DHCP or a static IP address. CMS parameters should be configured here when you try to register this device to CMS.

General

Information

Basic

Time

Password

System

Intercom

Device

Network

SIP

Ring Group

Access

Access Control

Person

Advanced

Video

More

English

Hello, admin

Network

DHCP

IP Address

192 . 168 . 88 . 90

Mask

255 . 255 . 255 . 0

Gateway

192 . 168 . 88 . 1

DNS

0 . 0 . 0 . 0

Save

Register To CMS

CMS

CMS IP

0 . 0 . 0 . 0

Password

Save

11

|             |                                                                                                               |
|-------------|---------------------------------------------------------------------------------------------------------------|
| DHCP:       | Enable DHCP (Dynamic Host Configuration Protocol) to dynamically distribute network configuration parameters; |
| IP Address: | Configure Static IP address to manually distribute network configuration parameters;                          |
| Mask:       | Subnet mask;                                                                                                  |
| Gateway:    | A component that is part of two networks, which use different protocols;                                      |
| DNS:        | Domain Name Server of the device;                                                                             |
| CMS:        | Enable to use CMS software to manage devices;                                                                 |
| CMS IP:     | Server address of CMS;                                                                                        |
| Password:   | Password you set for this device's CMS registration;                                                          |

### 2.3. Intercom > SIP

The SIP column concerns SIP registration, Display Name, Register Name, Username, Password, SIP Server Host, Outbound Proxy, Transfer Protocol, Video Payload, etc.

|                  |                                                            |
|------------------|------------------------------------------------------------|
| SIP:             | Enable to use SIP;                                         |
| Display Name:    | Display name of SIP;                                       |
| Register Name:   | Register Name of SIP;                                      |
| Username:        | Username of SIP;                                           |
| Password:        | Password of SIP;                                           |
| SIP Server Host: | Directly fill in SIP server's address e.g., 192.168.68.90; |

|                     |                                                  |
|---------------------|--------------------------------------------------|
|                     | The default port is 5060;                        |
| Outbound Proxy:     | Outbound Proxy of SIP; the default port is 5060; |
| Transport Protocol: | Transport Protocol (UDP, TCP, TLS);              |
| Video Payload:      | Video payload range is 96-127;                   |

## 2.4. Intercom > Ring Group

Ring group is for setting up SIP calls or call mode. Concierge button, the length of the call and ring time can also be configured here.

The screenshot shows the 'Ring Group' configuration page in the Dnake interface. The sidebar on the left contains navigation links: Overview, Basic, Advanced, and Settings. The main content area is divided into three sections:

- Ring Group:** Includes a 'Name' field, a 'Number' field, and a table for adding members. There are buttons for 'Add', 'Remove', and 'Save'.
- Call Concierge:** Includes a 'URL' field and a 'Save' button.
- Settings:** Includes dropdown menus for 'Dial Mode' (Normal, Repeat), 'Ring Time' (10s, 20s, 35s, 45s, 60s, 90s, 120s), and 'Call Time' (120s, 300s, 600s, 1200s, 1800s). There is a 'Save' button at the bottom.

|                     |                                                                                                                                                                                                                                                                                                                     |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Mode:               | 2 modes supported (one by one, all at once);                                                                                                                                                                                                                                                                        |
| Call Concierge URL: | Fill in the call destination for concierge button or the single button on the device; <ul style="list-style-type: none"> <li>● IP call:<br/>Fill in sip:IP address, e.g., sip:192.168.68.90;</li> <li>● SIP call:<br/>Fill in sip:sip account@SIP server address:port, e.g., sip:101@192.168.68.90:5060;</li> </ul> |
| Dial Mode:          | 2 dial modes supported (Normal, Repeat);                                                                                                                                                                                                                                                                            |
| Ring Time:          | The ring will be ended automatically after a period of time (10s, 20s, 35s, 45s, 60s, 90s, 120s)                                                                                                                                                                                                                    |
| Call Time:          | The call will be ended automatically after a period of time (120s, 300s, 600s, 1200s, 1800s);                                                                                                                                                                                                                       |

## 3. Access

### 3.1. Access > Access Control


Relays, and access cards can be configured here.

The screenshot shows the Dnake web interface. The sidebar on the left lists various configuration categories. The 'Access Control' section is selected, displaying two sub-sections: 'Relay' and 'Card'. The 'Relay' section contains a table with columns for Relay, DTMF, Unlock Delay, and Unlock Time. 'Relay1' is listed with a DTMF value of '#', an Unlock Delay of '0s', and an Unlock Time of '3s'. A 'Save' button is present. The 'Card' section features a 'Master Card' toggle (enabled), a 'Swipe to arm/disarm' toggle (disabled), and another 'Save' button.

|                      |                                                                                              |
|----------------------|----------------------------------------------------------------------------------------------|
| Relay 1:             | 1 relay supported;                                                                           |
| DTMF:                | Dual-tone multi-frequency signaling (Relay1: #, Relay2:0, relay3: *);                        |
| Unlock Delay:        | The length of unlock delay time (1-9s);                                                      |
| Unlock Time:         | The length of unlock time (1-9s);                                                            |
| Master Card:         | Click read to add Master card to manage cards;                                               |
| Swipe to arm/disarm: | Enable to let security alarm (on and off) keep pace with registered cards (lock and unlock); |

### 3.2. Access > Person

Person column is for access authorization.

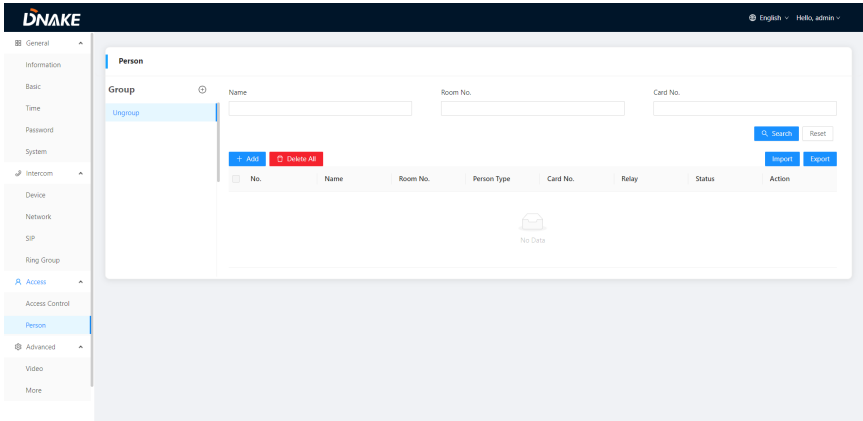


|             |                                            |
|-------------|--------------------------------------------|
| Search:     | Fill in text inputs to search;             |
| Reset:      | Click reset to clear words in text inputs; |
| Add:        | Add users to Door Station;                 |
| Delete All: | Delete all data on the chart;              |
| Export:     | Export all data on the chart;              |

## 4. Advanced

### 4.1. Advanced > Video


Real-time video from IP cameras can be obtained by filling in its URL (RTSP). On the talking interface of Indoor Monitor, you can click the little keyboard icon to switch to IP cameras' video. (No.1 on the keyboard stands for Door Station while No.2 to No.5 stands for IP camera)

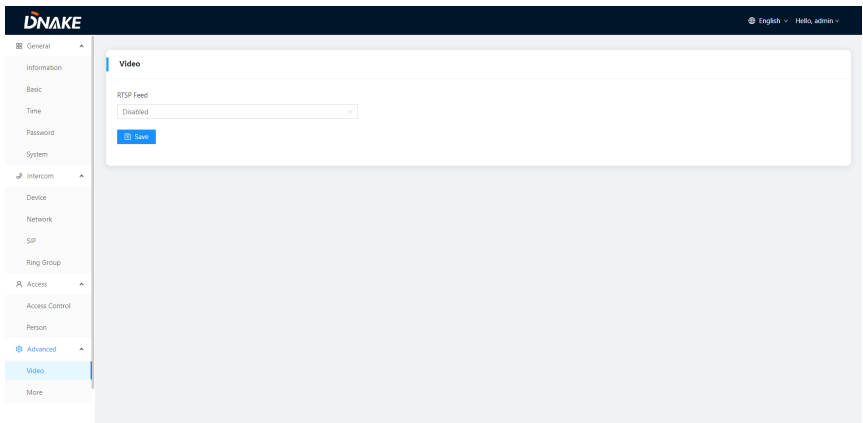

|            |                                                                   |
|------------|-------------------------------------------------------------------|
| RTSP Feed: | 4 IP cameras supported to switch while talking on Indoor Monitor; |
| URL:       | IP camera's URL;                                                  |


## 4.2. Advanced > More

More column is for ONU Penetration.

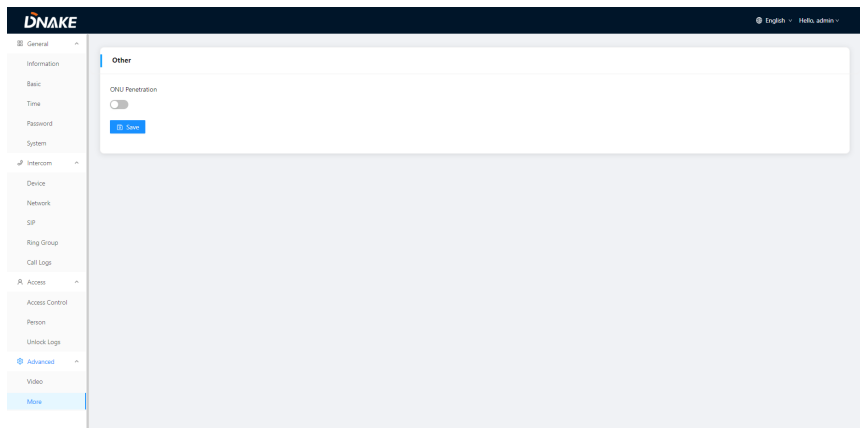


|                  |                                               |
|------------------|-----------------------------------------------|
| ONU Penetration: | Enable to prevent ONU from banning multicast; |
|------------------|-----------------------------------------------|

# SYSTEM DIAGRAM

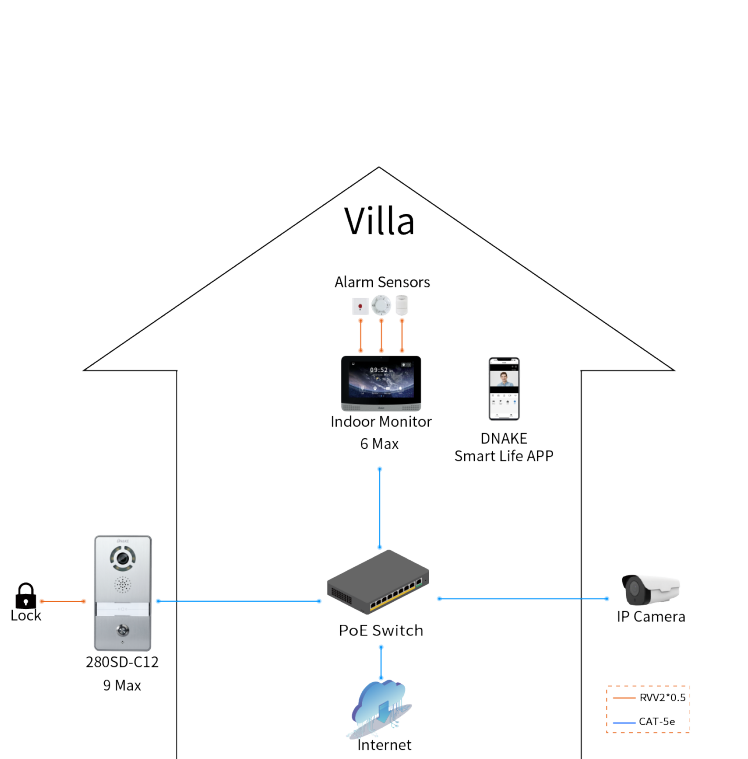


# DEVICE WIRING

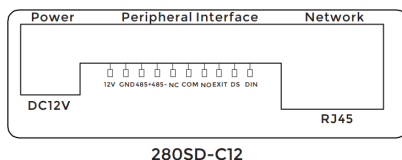

## 1. Network (PoE)

Standard RJ45 interface is used to be connected to the Master Station, Indoor Monitor and/or other network equipment.

 
PSE shall comply with IEEE 802.3af (PoE) and its output power not less than 15.4W and its output voltage not be less than 50V.



## 2. RS485/Switching Value Output


Enable to connect equipment with RS485 interface.

Connect to the lock module (an independent power supply is necessary for the lock).

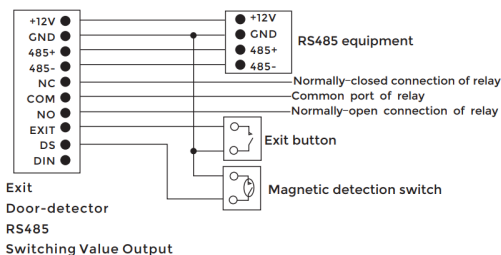


## 3. Exit/Door-detector

Connect with the Exit button and door-detector switch; DIN is a reserved terminal, please don't connect it.

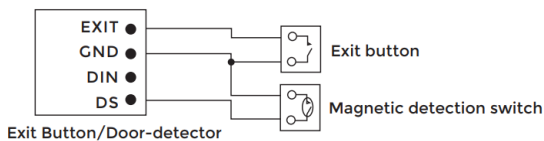


### ⚠ Warning!

1. When connecting to an inductive load device such as a relay or electromagnetic lock, you are recommended to use a diode 1A/400V (included in the accessories) in anti-parallel with the load device to absorb inductive load voltage peaks. The intercom will be better protected in this way.
2. The load current of the relay cannot be greater than 2A.  
See attached picture for more details.

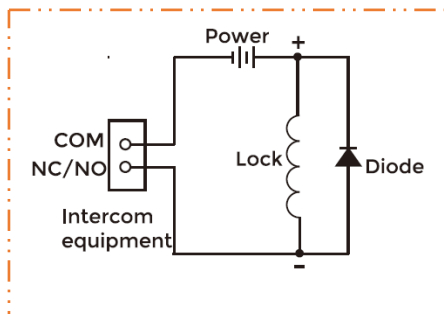


# INSTALLATION

## Surface Mounting-86 Mounting Box

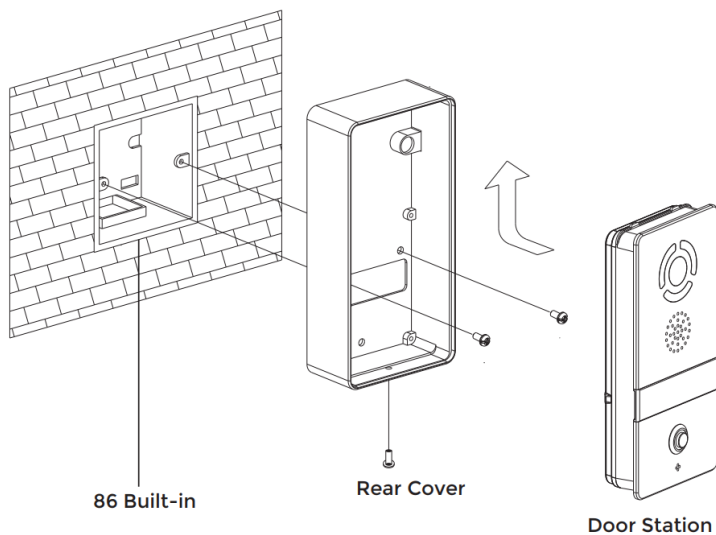


Product size: 170 × 84.5 × 31 mm

## Flush Mounting

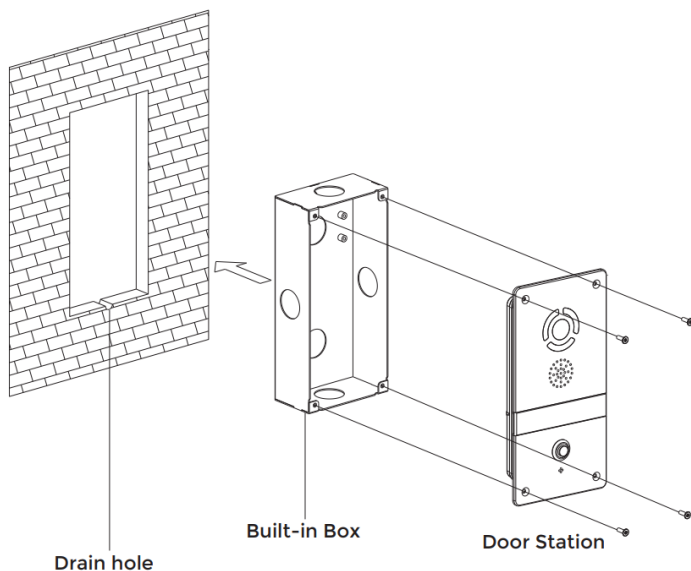

Product size: 190 × 95 × 27 mm  
Surface Mounting size: 180 × 85 × 45 mm  
Mounting hole size: 185 × 90 × 52 mm

### Tips:

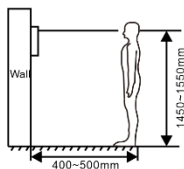

1. The camera should be 1450~1550mm above the ground. The camera at this height can capture human face perfectly.
2. Seal up the cracks between Door Station and the wall with glass glue.

# TROUBLESHOOTING

---

## **The Indoor Monitor cannot start up or power off automatically.**

- Check whether it has power-failure, and power it on again

---

## **The Indoor Monitor display screen is too dim.**

- Check whether the brightness and contrast settings of screen are correct.

---

## **No sound during the communication.**

- Check whether the Indoor Monitor is set as mute mode, or the volume is set to the lowest.

---

## **The Indoor Monitor cannot monitor the Door Station.**

- Other user is using the system, so you can use it once he/she finished the operation.

---

## **Multimedia files cannot be played normally.**

- Check whether the system supports the file format. Please refer to the multimedia setting for details.

---

## **No response when clicking Indoor Monitor display screen.**

- Press "Unlock" button for 5s, or slowly slide horizontally or vertically on the LCD to make touchscreen calibration. It needs to be calibrated.

---

## **Touchscreen responses slowly or cannot make calibration.**

- Take down any protective paster, since it may affect identification
- and input for device;
- Ensure the finger is dry and clean when clicking touchscreen;
- Restart the device to clear any temporary software error.

---

## **The temperature of device is too high.**

- Long-term use leads to high temperature. It's normal and will not affect the device's use life and performance.
-

# SAFETY INSTRUCTION

**In order to protect you and others from harm or your device from damage, please read the following information before using the device.**

- Do not install the device in the following places:
- Do not install the device in high-temperature and moist environment or the area close to magnetic field, such as the electric generator, transformer or magnet.
- Do not place the device near the heating products such as electric heater or the fluid container.
- Do not place the device in the sun or near the heat source, which might cause discoloration or deformation of the device.
- Do not install the device in an unstable position to avoid the property losses or personal injury caused by the falling of device.

## **Guard against electric shock, fire and explosion:**

- Do not use damaged power cord, plug or loose outlet.
- Do not touch the power cord with wet hand or unplug the power cord by pulling.
- Do not bend or damage the power cord.
- Do not touch the device with wet hand.
- Do not make the power supply slip or cause the impact.
- Do not use the power supply without the manufacturer's approval.
- Do not have the liquids such as water go into the device.

## **Clean Device Surface**

- Clean the device surfaces with soft cloth dipped in some water, and then rub the surface with dry cloth.

## **Other Tips**

- In order to prevent damage to the paint layer or the case, please do not expose the device to chemical products, such as the diluent, gasoline, alcohol, insect-resist agents, opacifying agent and insecticide.
- Do not knock on the device with hard objects.
- Do not press the screen surface. Overexertion might cause floppover or damage to the device.
- Please be careful when standing up from the area under the device.
- Do not disassemble, repair or modify the device at your own discretion.
- The arbitrary modification is not covered under warranty. When any repair required, please contact the customer service center.
- If there is abnormal sound, smell or fume in the device, please unplug the power cord immediately and contact the customer service center.
- When the device isn't used for a long time, the adaptor and memory card can be removed and placed in dry environment.
- When moving, please hand over the manual to new tenant for proper usage of the device.

 **EASY & SMART  
INTERCOM SOLUTIONS**