

VIP6798



Manual

access

Meer weten over ons compleet assortiment?

Contacteer uw vertegenwoordiger of
bezoek ons kenniscentrum.

by **nestor**
company

Focus on **expertise**,
supplier of **security**

nestor company

E3-laan 93 9800 Deinze - Tel. 32 (0)9 380 40 20
sales@nestorcompany.be - www.nestorcompany.be

Art. 6798 7" hands free touchscreen videophone for IPure system

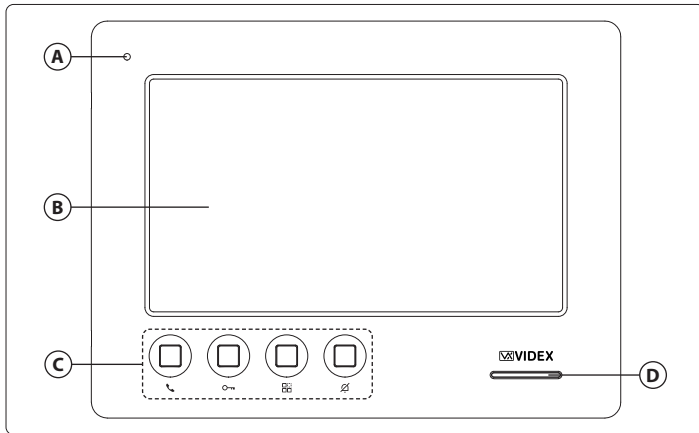


Fig. 1 Front

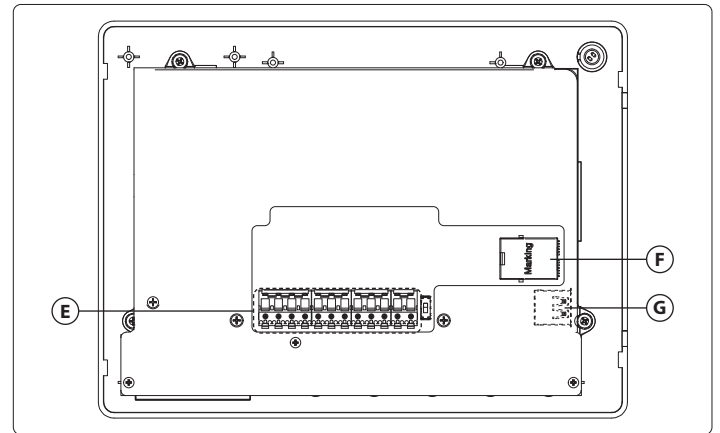


Fig. 2 Front

DESCRIPTION

7" TFT high-resolution LCD monitor, OSD capacitive touch screen, 4 buttons configurable for functions: door open, inter-com call, auto start, camera switching, timed privacy service. 12Vdc or PoE power supply.

2 inputs / 2 outputs.

Wall mounted, white or black finish.

VIDEOPHONE INITIALISATION

If powering on the videophone (through a POE switch/router or an external power supply unit) the display shows the message "DEVICE NOT INITIALISED", use the configuration software for the VIDEX IP system (Videx IP Wizard.exe) to setup the device and the system.

LEGEND

- | | |
|---------------------------------|---|
| Ⓐ Microphone | Ⓔ Connection terminals |
| Ⓑ Touchscreen display | Ⓕ Ethernet connector |
| Ⓒ Physical programmable buttons | Ⓖ USB connector for Wi-Fi optional dongle |
| Ⓓ Speaker | |

To download the programming software **VX IP Wizard** and obtain the latest firmware and manuals please visit the following web-site and register

<https://service.videx.it/>



HOME SCREEN

The Home screen (Fig. 3) includes navigation buttons, control buttons and general information:

- **Menu button**
Navigate to other screens (for details see "Menu" on pag. 4).
- **Current time**
(to set see "Date and time" on pag. 6).
- **No connection icon**
It will appear if there isn't any internet connection.
- **Wi-Fi signal level**
It indicate the level of Wi-Fi signal.
- **Missed calls button**
View missed calls and access Event log screen (for details see "Event log" on pag. 3).
- **Date, weather information and location**
(to set see "Weather location" on pag. 6).
- **Thermostat**
(for details see "Thermostat" on page 12).
- **Control touch buttons**
(for details see "Control touch buttons" on pag. 2).

ⓘ If the display is in standby, simple tap it to activate.

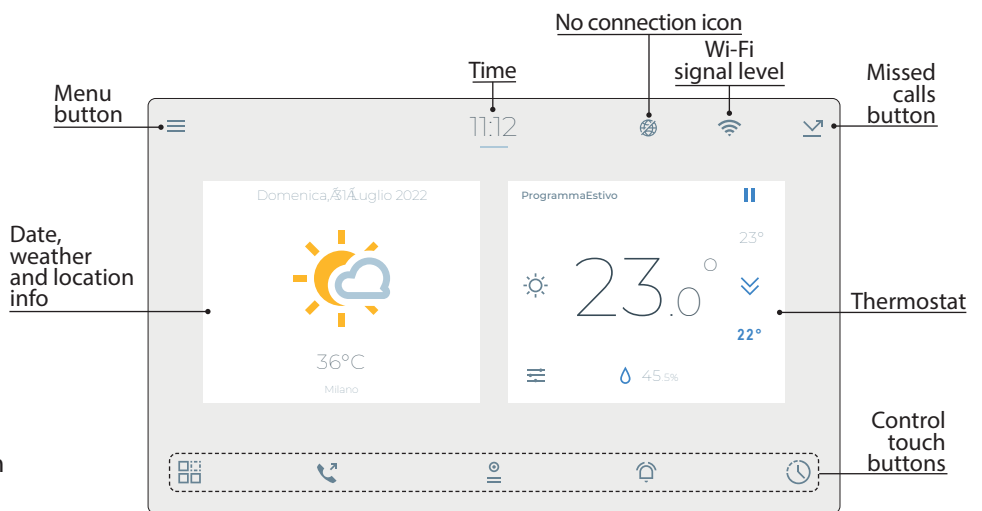


Fig. 3

CONTROL TOUCH BUTTONS



OUTPUT

Shows the list of secondary services connected to the device.

1. Tap the desired service.

2. Tap **YES** button to confirm

or

Tap **NO** button to return to Outputs screen.

Tap the < button in the top left corner of the screen to return to the Home screen.

i If you can't see all the outputs, scroll left and right by swiping the screen with your finger.

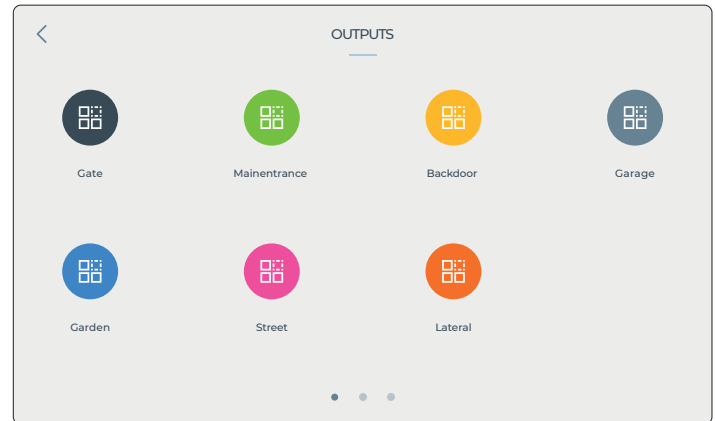


Fig. 4



INTERCOMS

Shows the list of indoor stations connected to the device.

Tap the intercom you want to call: the device starts an intercommunication call with the selected indoor station.

or

Tap the < button in the top left corner of the screen to return to the Home screen.

i For the functions allowed during a call, please see "Intercommunicating call" on pag. 11

i If you can't see all the devices, scroll left and right by swiping the screen with your finger.

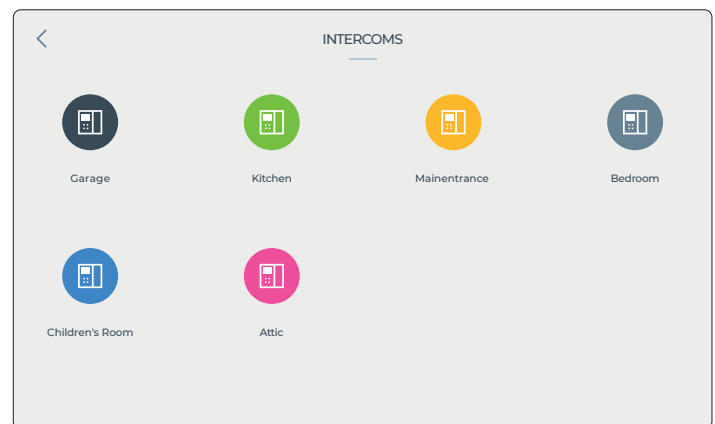


Fig. 5



CAMERAS

Shows the list of video outdoor stations and surveillance cameras connected to the device.

Tap one of them to activate it: the device shows the camera output.

or

Tap the < button to return to the Home screen.

i For the functions allowed during a camera recall or during a video call, please see "During a video call" on page 10

i If you can't see all the outdoor stations or cameras, scroll left and right by swiping the screen with your finger.

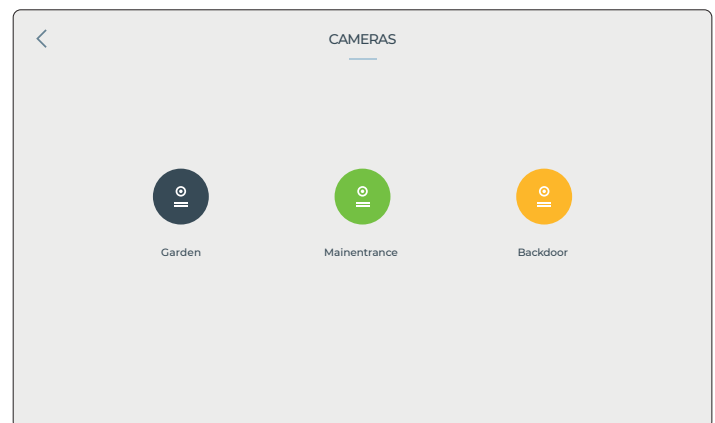


Fig. 6



PRIVACY ENABLE/DISABLE

Enable or disable the Privacy service for the set time. Press again to disable the service.



Privacy service disabled



Privacy service enabled

Art. 6798 7" hands free touch screen videophone for IPure system



EVENT LOG

Shows the incoming, outgoing, missed and rejected calls for the time day, month and year.

Show type of events

- Tap **ALL** to see all events.
- Tap **MISSED** to see missed calls.
- Tap **REJECTED** to see the calls made but rejected from the other devices.

Event details

For each event:

- Event type icon:

 Outgoing call (green icon)

 Rejected call (red icon)

 Incoming call (green icon)

 Missed call (red icon)

 Surveillance camera

- Name of indoor/outdoor station or surveillance camera involved in the event.
- Date and time.

i If you can't see all the events, scroll up and down by swiping the screen with your finger.

Event options

Tap an event to access event options:

- Tap the  green button in the bottom right corner of the screen to recall the indoor/outdoor station or activate surveillance camera.
- If the call relates to a indoor station, tap  /  buttons to play the recorded audio.
Note: audio recording is only available if there is user response, otherwise nothing will be recorded. The entire conversation will be recorded.
- If the call relates to a video door station, the device shows a snapshot of the video. Tap  /  buttons to play the recorded video.
Note: the max length of video recording is 1 minute.
- If the call relates to a surveillance camera, the device shows only a snapshot of the video.
- Tap  to delete the single event.
- Tap the  button in the top left corner of the screen to return to the Event Log screen.

i Swipe an event with your finger from right to left to quickly access the following commands:



to view the screenshot or video associated with the event



to delete the single event

Show current Month, Year and All events log

- Tap the  button in the top right corner of the screen to see the list for the current month.
- Tap again  button to see the list for the current year.
- Tap again  button to see the list for all the events.

Notification badge

If there is one or more missed calls, you will see a red badge on the Home screen over  with the number of missed events.

Clear Event Log

To clear the complete Event Log, see **"Clear Event Log" on page 9.**



Fig. 7

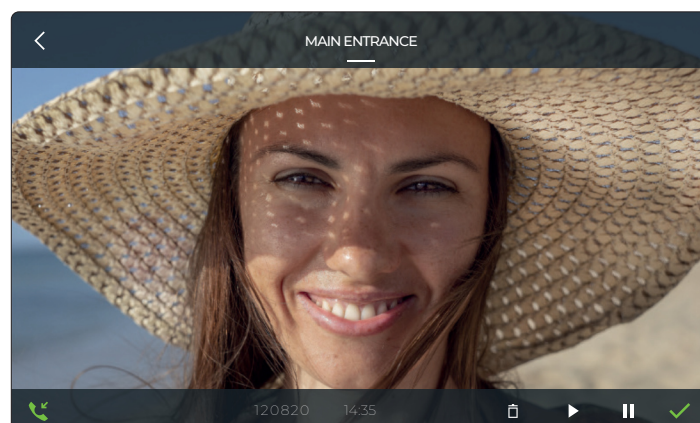


Fig. 8

Art. 6798 7" hands free touch screen videophone for IPure system

THIRD-PARTY INTEGRATIONS

This section essentially consists of a lightweight web browser suitable for displaying simple web pages. If you have a third-party device manageable via a web page (for example alarm system, sprinkler etc) you can add it to this section.

i The addition of third-party services can be carried out through the VX IP Wizard software or through the procedure described in the section "Third-party Integration" on page 8.

- Tap the  button to access the list of set third-party services.

i The  button will only appear if one or more services have been added previously.

i If only one service has been set, this service will start directly at the press of the  button.

- Act on the commands and settings available for the device in use as needed as if you were navigating any website (the options vary depending on the device).
- Tap the + and – buttons to enlarge and reduce the size of the page.
- Tap the ↺ button to reload the page.
- Tap the buttons < and > to go back and forth in the browsing history.
- Tap the ✕ button to close the page and return to the Home screen.

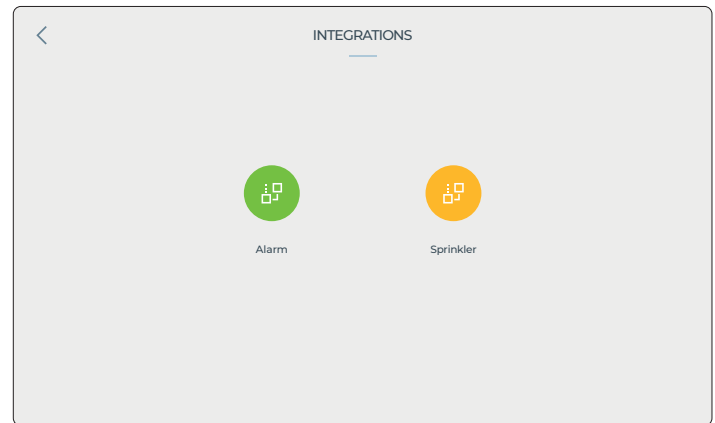


Fig. 9

MENU

To open the **Menu** tap the  icon on the top left corner of the Home screen.

The following options are available:

- **About**
- **Appearance**
- **Audio**
- **Privacy duration**
- **General**

i If you can't see all the options, scroll up and down by swiping the screen with your finger.

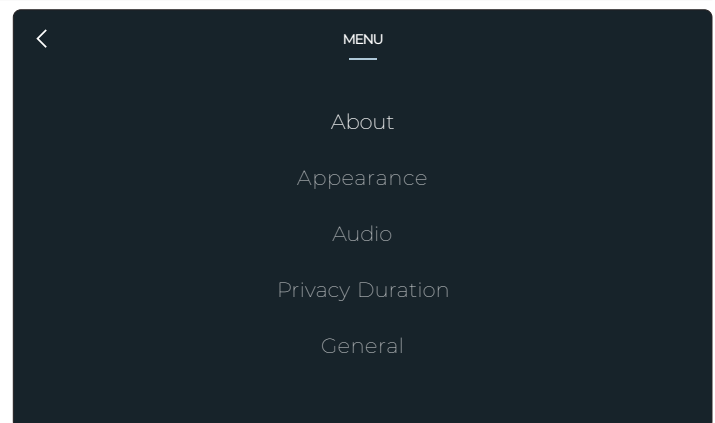


Fig. 10

ABOUT

Provides the following device information:

- Device part number
- Device name
- Software version
- ID
- IP address
- MAC address
- Internal temperature (in °C Degrees Celsius)
- Relative humidity

Tap the < button to return to Menu.

APPEARANCE

Enables you to set the dark or light theme.

1. Tap ^ or v buttons to select the desired theme.
2. Tap the ✓ green button in the top right corner of the screen to confirm and return to Menu

or

Tap the < button to return to Menu without saving the changes.

Art. 6798 7" hands free touch screen videophone for IPure system

AUDIO

Enables you to set:

- Ringtone of outdoor station (ten tones available)
- Ringtone of indoor station (ten tones available)
- Ringtone of local bell (ten tones available)
- Number of rings (from 1 to 10, note that the number of rings is always the same for outdoor stations, indoor stations and local bell)
- Call tone volume

1. Tap $\wedge$ or $\vee$ buttons for each **Ringtone** section to select the desired ringtone. The device will play the current ringtone.

2. Tap $\wedge$ or $\vee$ buttons of the **Number of rings** section to select the desired number of rings.

3. Slide $\llcorner$  $\lrcorner$ slider to set the desired **Call tone volume**. The device will play Tone 1 ringtone at the selected volume.

4. Tap the $\checkmark$ green button in the top right corner of the screen to confirm and return to Menu

or

Tap the $\leftarrow$ button to return to Menu without saving the changes.

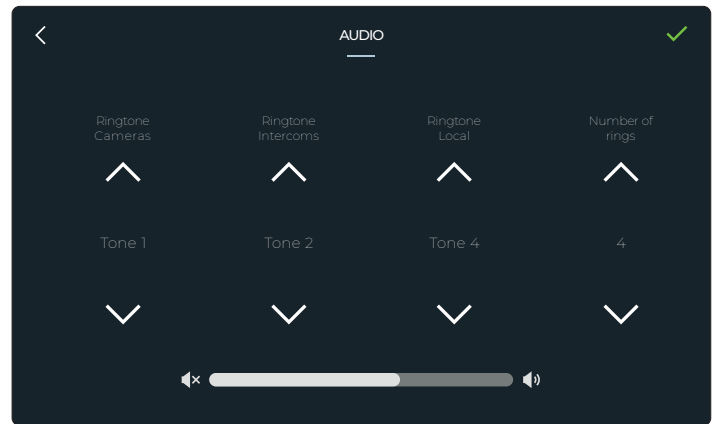


Fig. 11

PRIVACY DURATION

Enables you to set the duration of Privacy service from 1 hour to 24 hours or infinite.

1. Tap $\wedge$ or $\vee$ buttons to select the desired Privacy duration time.

2. Tap the $\checkmark$ green button to confirm: the device goes back to General sub menu with the selected Privacy time duration

or

Tap the $\leftarrow$ button to return to Menu without saving the changes.

GENERAL

In the **General** sub menu the following options are available:

- | | |
|-------------------------------|----------------------------------|
| • Software update | • Third-party Integration |
| • Network | • Camera Settings |
| • Language | • Thermostat Settings |
| • Date and Time | • Clear Event Log |
| • Weather Location | • Screen Cleaning |
| • Link Videx App | • Reset Web Page Password |
| • Surveillance Cameras | • Factory Reset |
| | • Reboot |

 **If you can't see all the options, scroll up and down by swiping the screen with your finger.**

SOFTWARE UPDATE

Enables you to update the device software:

1. Enter the administrator password and then tap the $\checkmark$ button.

Tap $\curvearrowright$ button to delete digits. Tap the $\leftarrow$ button to return to Menu.

2. If the software is already the latest, the device shows the message "Lastest version already installed"

otherwise

The device starts to download the latest version available and then reboots.

NETWORK

Enables you setup and check the Internet connection.

Check the Internet connection

1. Tap **Check your Internet connection**: the device starts the Internet connection test and reports the results.

Wi-Fi

If you have installed the Wi-Fi optional dongle, you can connect to a Wi-Fi network.

1. Tap **Wi-Fi**: the device shows a switch to enable or disable the Wi-Fi connection.

2. Tap on the switch to enable Wi-Fi connection: the device shows the list of available Wi-Fi networks and relative Wi-Fi signal level.

3. Select the network you want and tap the $\checkmark$ button: if necessary, enter your network password.

4. Once you are connected to the network, the device show the IP address, subnet mask, router address, network name and a button to delete the network: tap it and then tap **YES** to delete the network, tap **NO** to go back.

5. Tap the $\leftarrow$ button: the device will reboot and connect to the selected network.

Art. 6798 7" hands free touch screen videophone for IPure system

LANGUAGE

Enables you to select the device language from English, Italian, French, Spanish, German, Norwegian or Portuguese languages:

1. Tap ^ or v buttons to select the desired language.
2. Tap the ✓ green button to confirm: the device will reboot automatically and set the selected language.

or

Tap the < button to return to Menu without saving the changes.

DATE AND TIME

Enables you to set your timezone or set date and time manually.

i The current date, time and timezone are shown on the first line.

Set timezone

1. Tap **Set Timezone**.
 2. Tap ^ or v left buttons to select the desired geographic area or UTC (Coordinated Universal Time).
 - If you select a geographic area, you can select your city with the ^ or v buttons to the right.
 - If you select UTC, you can select the UTC offset hours by increasing/decreasing with the ^ or v buttons to the right.
 - You can also select the UTC hours offset directly from the left scroll menu.
 3. Tap the ✓ green button to confirm: the device will reboot automatically and set the selected timezone
- or
- Tap the < button to return to Menu without saving the changes.

Set date and time manually

1. Tap **Set date and time manually**.
 2. Tap ^ or v buttons of the corresponding fields to set Year, Month, Day, Hour and Minute.
 3. Tap the ✓ green button to confirm: the device goes back to Date and Time menu with the selected date and time
- or
- Tap the < button to return to Menu without saving the changes.

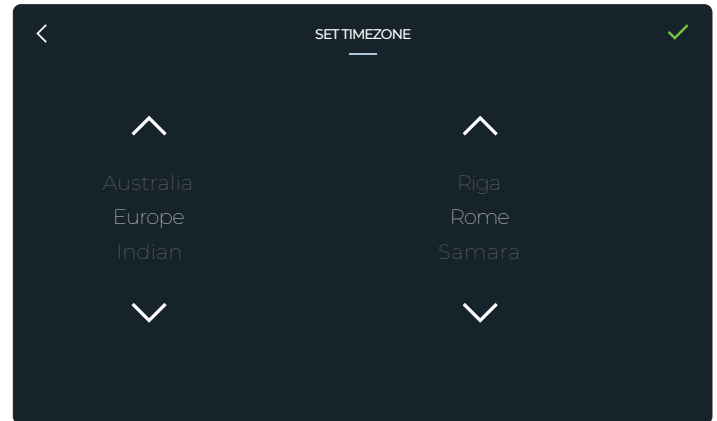


Fig. 12

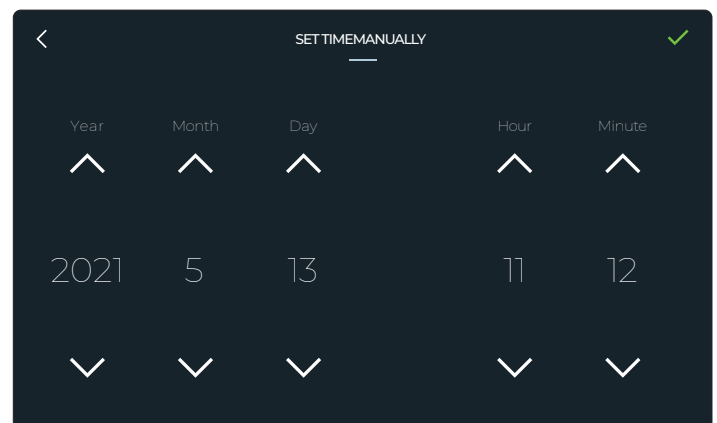


Fig. 13

WEATHER LOCATION

Enables you to set the desired location for weather information.

1. Type the location with the touchscreen keyboard.
2. A list of locations will appear: tap the desired location.
3. Tap the ✓ green button to confirm: the device goes back to General menu with the selected weather location

or

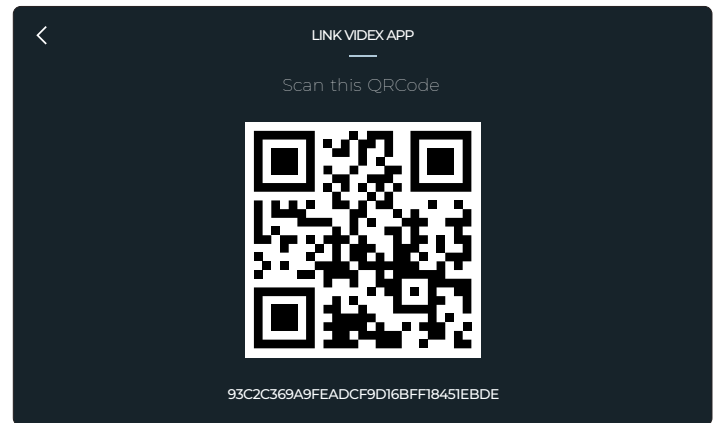
Tap the < button to return to the General menu: a message will appear to save changes or not: tap **NO** to go back to edit location or tap **YES** to discard the changes and return to the General sub menu.

Art. 6798 7" hands free touch screen videophone for IPure system

LINK VIDEX APP

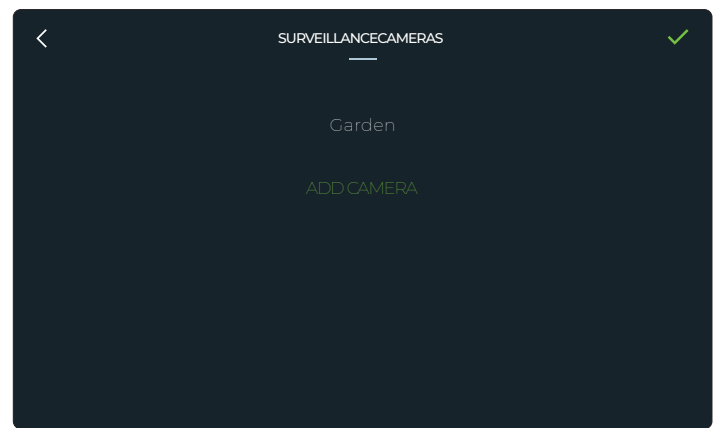
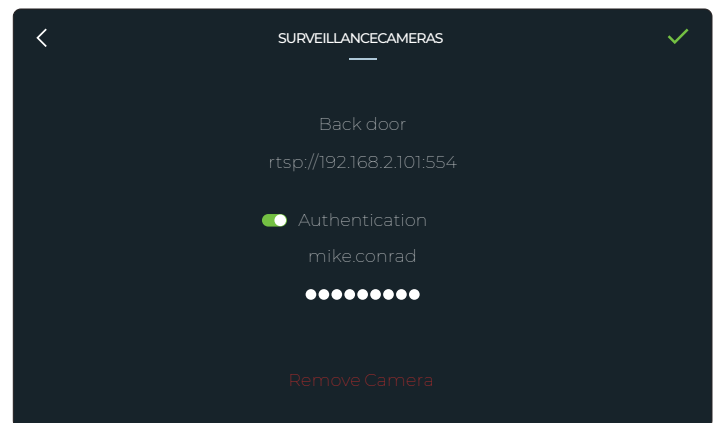
Enables the device to be connected to the Videx CloudNected smartphone app.

1. Enter administrator password and then tap the ✓ button.
Tap ↺ button to delete digits. Tap the < button to return to Menu.
2. Once you enter the correct password the device shows the QR binding code.
3. Open Videx CloudNected app on your smartphone, login or register (if you are not registered yet).
4. Tap the ≡ icon on the top left corner of the app, next tap "Device Manager" and then tap + button on the top right corner of the screen.
5. Scan the QR code: now your smartphone is connected with the device.


Fig. 14
SURVEILLANCE CAMERAS

Enables you to add, edit or delete surveillance cameras.

1. Enter the administrator password and then tap the ✓ button.
2. The device lists the surveillance cameras connected
3. If you tap one of them you can edit description name and address or remove it.
4. If you tap **ADD CAMERA** you can add a new camera (if it's present on the system) by entering:
 - Description name
 - Complete RTSP URL address
 You can also enable Authentication tapping the switch and entering username and password
5. Tap the ✓ green button to confirm: the new camera will appear in the list and in C Camera menu


Fig. 15

Fig. 16

or

Tap the < button to return to the Surveillance Cameras sub menu: a message will appear to save changes or not. Tap **NO** to go back to edit parameters or tap **YES** to discard the changes and return to the Surveillance Cameras sub menu.

Art. 6798 7" hands free touch screen videophone for IPure system

THIRD-PARTY INTEGRATION

Enables you to add, edit or delete third-party integrations. For details see **"Third-party integrations" on page 4.**

Add a new third-party integration

1. Enter the administrator password and then tap the ✓ button.
2. Tap **ADD INTEGRATION**.
3. Enter a description name and the complete third-party URL address.
4. Tap the ✓ green button to confirm: the new integration will appear in the list and in  Integrations menu

or

Tap the < button to return to the Third-party Integrations sub menu: a message will appear to save changes or not. Tap **NO** to go back to edit parameters or tap **YES** to discard the changes and return to the Third-party Integrations sub menu.

Edit a third-party integration

1. Enter the administrator password and then tap the ✓ button.
 2. Tap one of the integrations then tap the corresponding field to edit description name and address.
 3. Tap the ✓ green button to confirm
- or**
4. Tap the < button to return to the Third-party Integrations sub menu: a message will appear to save changes or not. Tap **NO** to go back to edit parameters or tap **YES** to discard the changes and return to the Third-party Integrations sub menu.

Delete a third-party integration

1. Enter the administrator password and then tap the ✓ button.
2. Tap one of the integrations then tap **REMOVE**. Tap **NO** to go back without removing or tap **YES** to confirm.

CAMERA SETTINGS

Enables you to adjust contrast, brightness and hue of the picture coming from any outdoor station.

1. Enter the administrator password and then tap the ✓ button.
2. The device show the list of the video outdoor stations connected: tap one of them to adjust it.
3. The device shows the picture coming from the selected camera: slide  contrast,  brightness and  hue sliders to adjust the image, the results are immediately visible.
4. Tap the ✓ green button to confirm: the device saves the settings and goes back to the Home screen

or

Tap the < button to return to the General menu: a message will appear to save changes or not: tap **NO** to go back to adjust or tap **YES** to discard the changes and return to Home screen.

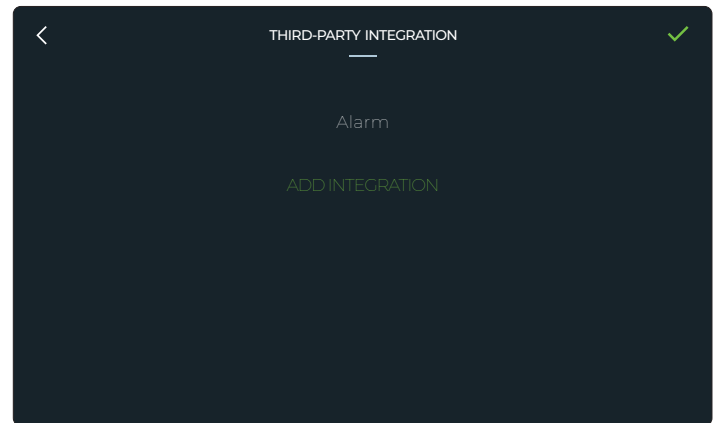


Fig. 17

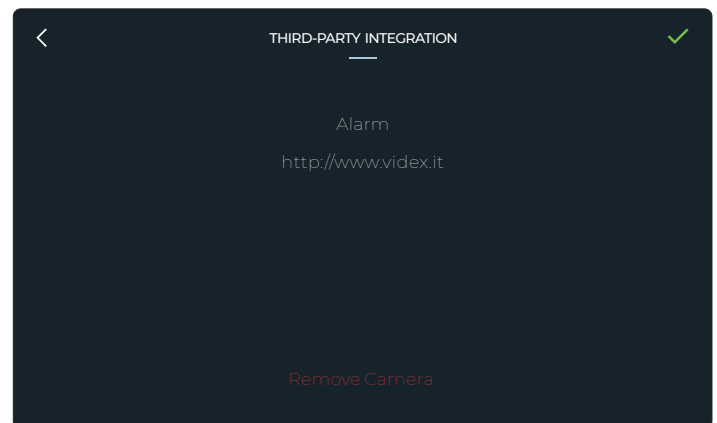


Fig. 18

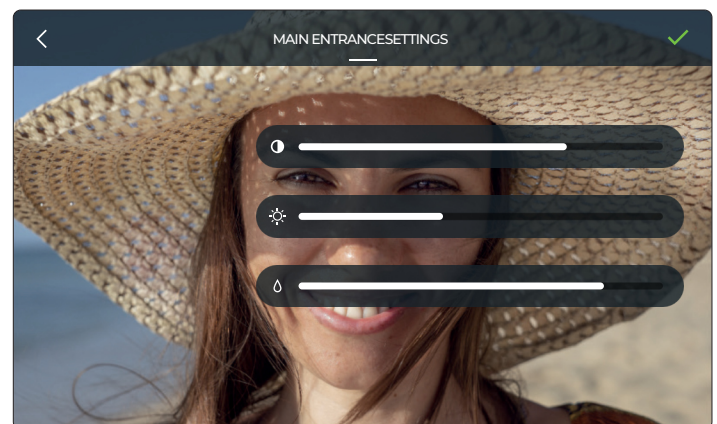


Fig. 19

Art. 6798 7" hands free touch screen videophone for IPure system

THERMOSTAT SETTINGS

Enables you to enable or disable the Thermostat feature and calibrate the temperature.

1. Tap the switch to enable or disable the Thermostat feature: the Thermostat widget will appear on the Home screen (For more details see **"Thermostat" on page 12**).

Temperature calibration

Enables you to set a temperature offset from -2.5 to +2.5 °C.

1. Tap Temperature Calibration
2. Change the temperature with ^ and v buttons.
3. Tap the ✓ green button to confirm
 or
 tap < to return to previous screen without saving the changes.

CLEAR EVENT LOG

Enables you to delete the Event log.

1. Enter the administrator password and then tap the ✓ button.
2. Tap **YES** button to confirm
 or
 Tap **NO** button to return to General sub menu.

SCREEN CLEANING

Enables you to disable touch screen for 10 seconds for screen cleaning.

1. Tap **YES** button to start Screen cleaning mode: a 10 seconds countdown will start.
 or
 Tap **NO** button to return to General sub menu.
2. At the end of countdown the device goes back to General sub menu and the touchscreen is available again.

RESET WEB PAGE PASSWORD

Enables you to reset the password to access the Internal Web Server.

1. Enter the administrator password and then tap the ✓ button.
2. Tap **YES** button to reset the password
 or
 Tap **NO** button to return to the General sub menu without change.

Default credentials:
Username: admin
Password: videx

For more details about Internal Web Server and how to personalize the password, see "Internal Web Server" on page 15

FACTORY RESET

Enables you to restore the device to the factory settings.

1. Enter the administrator password and then tap the ✓ button.
2. Tap **YES** button to reset the device
 or
 Tap **NO** button to return to General sub menu.

REBOOT

Enables you to reboot the device.

1. Tap **YES** button to reboot
 or
 Tap **NO** button to return to General sub menu.

DURING A VIDEO CALL

During a call coming from an outdoor station (or during a camera recall) you're able to make the following operations and adjustments:

-  **Activate a secondary service**
-  **Activate a secondary camera input**
-  **Enable or disable microphone**
-  **Audio/Video adjustments**
-  **Take a snapshot**
-  **Reject or close the call**

ACTIVATE A SECONDARY SERVICE

- Tap  icon: an overlay menu will appear with secondary services available.
- Tap one of them, then tap **YES** to activate it and return to the previous screen.
Tap **NO** to return to the previous screen without activating any secondary service.
- Tap  again to close the overlay menu.

ACTIVATE A SECONDARY CAMERA INPUT

- Tap  icon: an overlay menu will appear with secondary camera's available.
- Tap one of them: you will see camera image in Picture in Picture mode.
- Tap on Picture in Picture to show it in full screen: in this mode you can view the input from other camera's using the < and > buttons.
- Tap the image to close the full screen mode and return to Picture in Picture mode.
- Tap  to close the secondary video.
- Tap  again to close the overlay menu.

ENABLE OR DISABLE MICROPHONE

- Tap  icon to disable the microphone
- Tap again to reactivate it.

 Microphone enabled

 Microphone disabled

AUDIO/VIDEO ADJUSTMENTS

- Tap  icon: the following sliders will appear:
 -  Contrast
 -  Brightness
 -  Hue
 -  Microphone volume
 -  Speaker volume
- Slide any of them to make the related adjustment.
Tap again to close the menu.

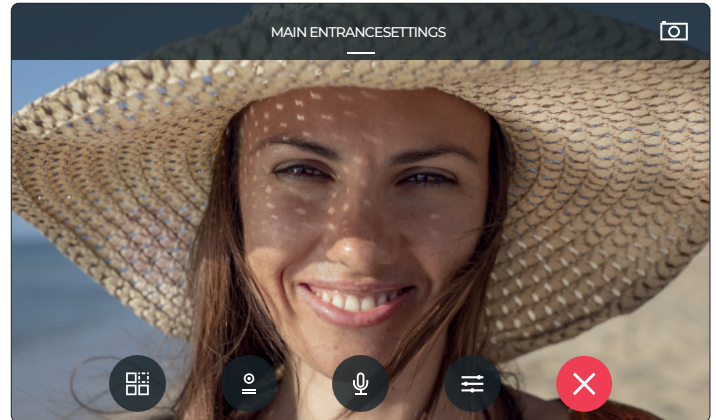


Fig. 20

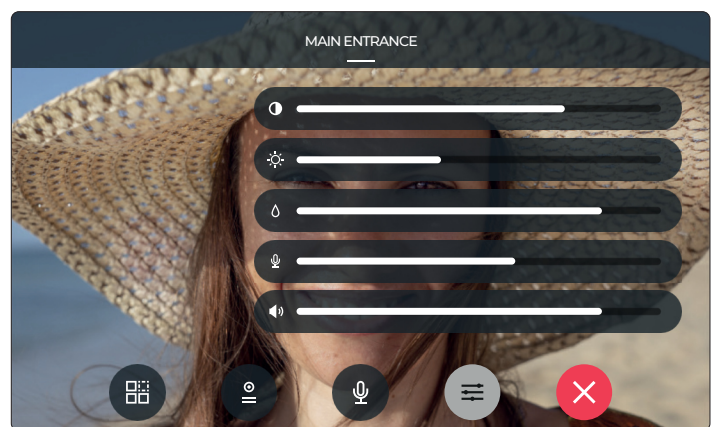


Fig. 21

TAKE A SNAPSHOT

By default, on every videocall or camera recall, the device takes a snapshot that will be a still frame of the video recording. If you tap  icon the still frame will be overwritten. To see the snapshot and the related video go to  **Event log** and tap the related event. For details see **"Event log" on page 3.**

REJECT OR CLOSE THE CALL

Tap  to reject or close the call

Art. 6798 7" hands free touch screen videophone for IPure system

INTERCOMMUNICATING CALL

During a call coming from an indoor station you're able to make the following operations and adjustments:

 **Enable or disable microphone**

 **Audio adjustments**

 **Reject or close the call**

ENABLE OR DISABLE MICROPHONE

1. Tap  icon to disable the microphone
2. Tap again to reactivate it.

 Microphone enabled

 Microphone disabled

AUDIO ADJUSTMENTS

1. Tap  icon: the following sliders will appear:

 Microphone volume

 Speaker volume

2. Slide any of them to make the related adjustment.
Tap again to close the sliders menu.

REJECT OR CLOSE THE CALL

Tap  to reject or close the call.

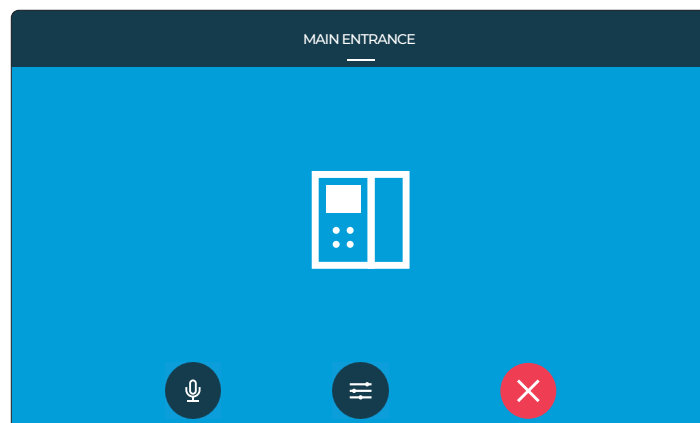


Fig. 22

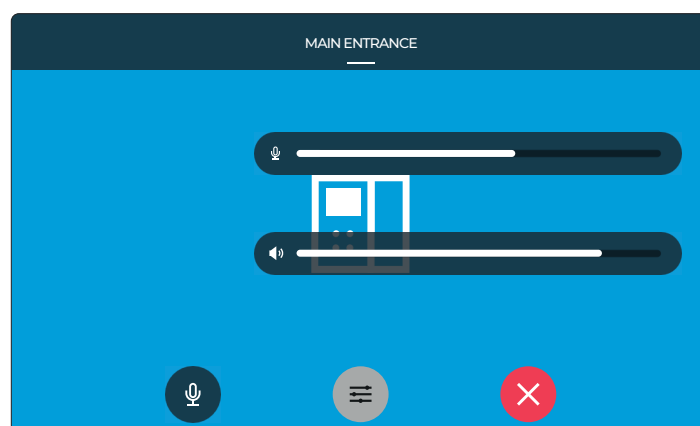


Fig. 23

THERMOSTAT

This section allows you to control your thermostat (after required connections are made).

ENABLE THE THERMOSTAT FEATURES

From the Home screen:

1. Tap **Menu** ≡.
2. Tap **General**.
3. Scroll down the list and tap **Thermostat**.
4. Move the switch to **ON**: the widget will now appear on the Home screen.

MODE CHANGE

From the Home screen:

1. Tap **Mode** (it's the button on the left of the temperature).
2. Select the desired mode between **Summer** ☀, **Winter** ❄ and **Off** ⏻.
3. Tap **OK** to set the selected mode or
Tap **CANCEL** to return to Home screen without change the current setting.

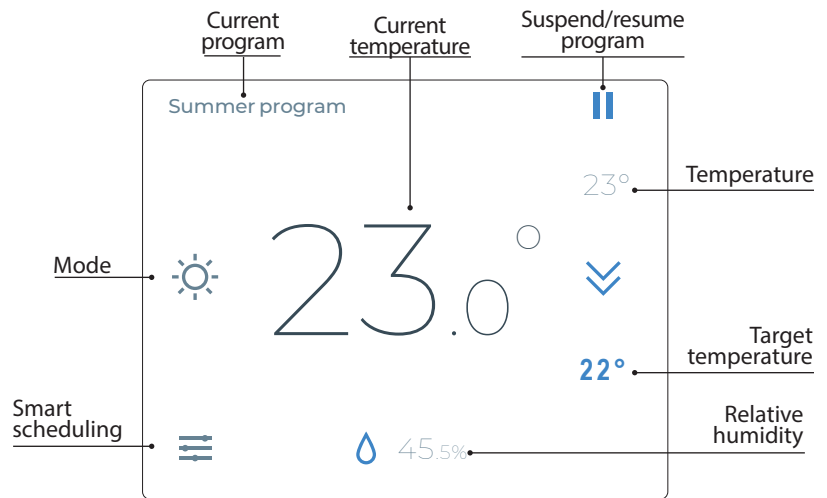


Fig. 24

MANUAL OVERRIDE TEMPERATURE SETTING

It enables you to set the desired temperature manually until it is reached or for a set time.

From the Home screen:

1. Tap **Current temperature**.
2. Increase and decrease the value using ^ and v buttons.
3. If you want to time the setting duration, tap ⌚ button: set hours and minutes using the respective ^ and v buttons. Tap ✓ to set the selected time or ✕ to return to the previous screen without setting the time.
4. Tap ✓ to set the selected temperature and time or
Tap ✕ to return to Home screen without change the current setting.



Fig. 25

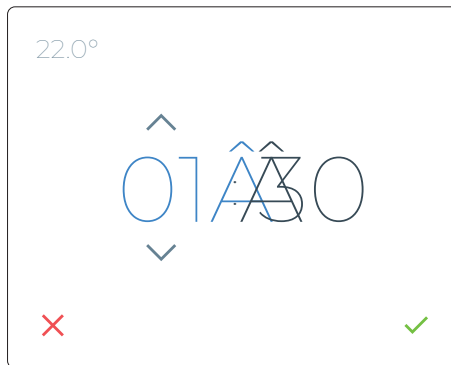


Fig. 26

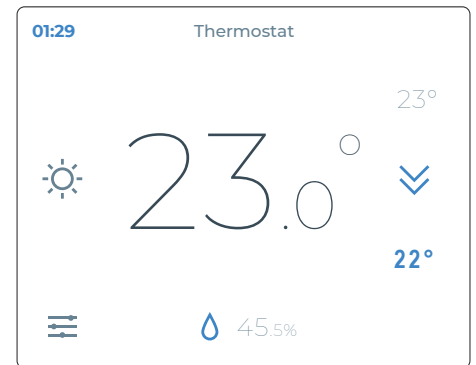


Fig. 27

 The remaining time of the manual override setting will be shown in the upper left corner in blue.

SMART SCHEDULING

Allows you to set up to 10 weekly programs according to your needs.

Create a program

From the Home screen:

1. Tap  to enter the **Smart scheduling**.
2. Tap the + button in the top right corner of the screen to add a new program.
3. Digit the program name (le. "Summer Program") and tap enter.

i To start the program from the Smart scheduling screen, press the respective ► button. Tap **II** to stop it.

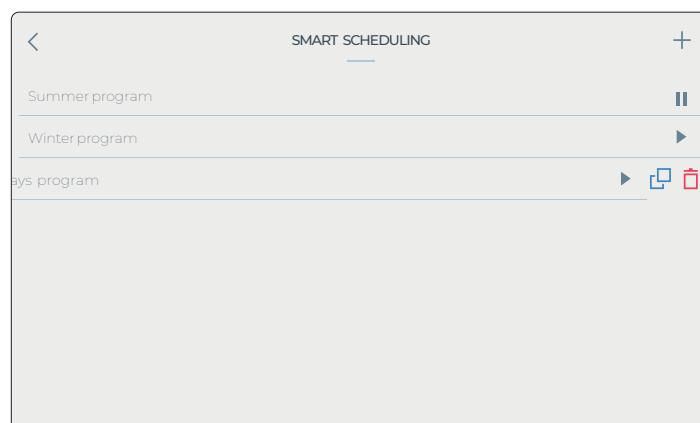


Fig. 28

Program customization

From the Smart scheduling screen:

1. Tap on the program you want to customize: the weekdays and time slots will be shown.
2. Tap the desired day.
3. Set the start and end time and the desired temperature with the respective ^ and v buttons.
4. If you want to set this time slot only for the day tap the **No, this day only** button. The device will return to the previous screen.
or
 If you want to replicate the multi-day time slot tap the button **Yes, select days** button:
5. Select the days you want to replicate the setting and tap the **Go on** button.
6. If you want to continue with the programming tap the **Yes, go on** button
or
 If you want to finish programming tap the **No, close** button.

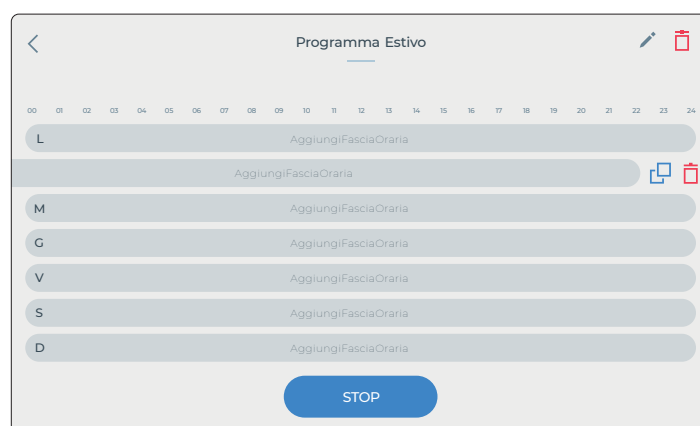


Fig. 29

Duplicate or delete a single daily schedule

From the program screen:

1. Swipe left on the day you want to duplicate or delete.
2. Tap the  button to duplicate, then select the days and confirm.
3. Tap the  to delete and confirm on the next screen.

i To add more time slots, tap the + button and repeat the procedure. The maximum number of time slots per day is 8.

i To start the program from the customization screen, press the **START** button. Tap **STOP** to stop it.

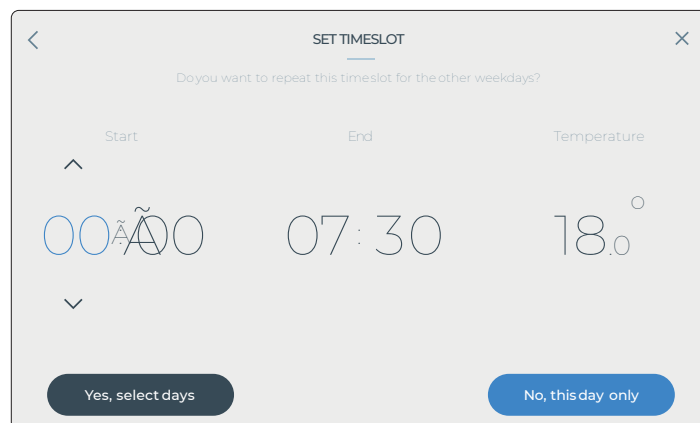


Fig. 30

Art. 6798 7" hands free touch screen videophone for IPure system

Rename or delete a program

From the Smart scheduling screen:

1. Tap the program you want to rename or delete.
2. Tap the  button to rename the program.
3. Tap the  button to delete and confirm on the next screen.

Duplicate or delete a program

From the Smart scheduling screen:

1. Swipe left on the program you want to duplicate or delete.
2. Tap the  button to duplicate.
3. Tap the  button to delete and confirm on the next screen.

Manually suspend the active program

From the Home screen:

1. Tap the  button placed next to the name of the running program.

2. Tap the **MANUAL RESTART** button to manually suspend the program

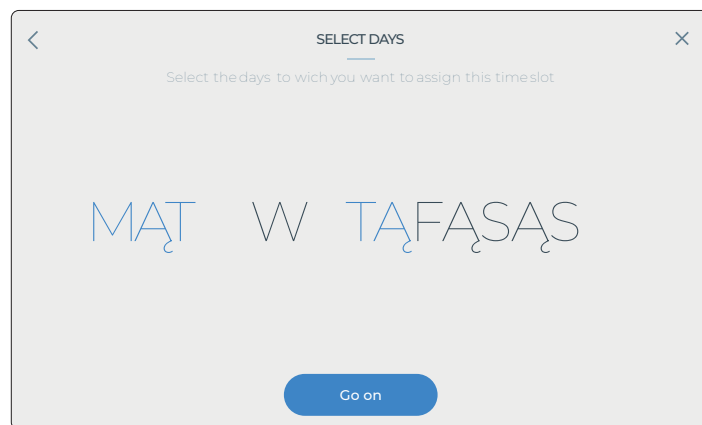
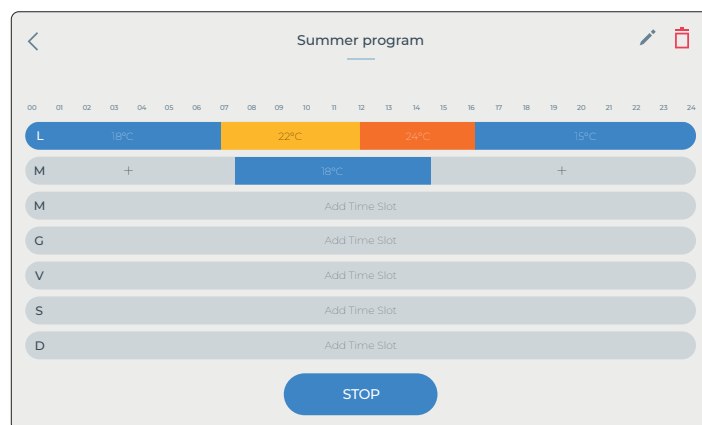
or

Tap the **SUSPEND...** button to set the sleep time: set the hours and minutes with the respective  and  buttons, tap **CONFIRM** or **CANCEL** to cancel and return to the previous screen

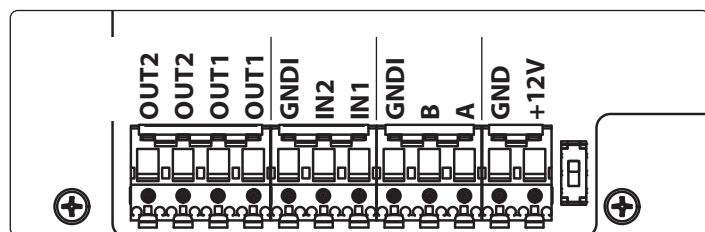
or

Tap the **END THE PROGRAM** button to terminate the program immediately.

 **To manually restart the program from the Home screen, press the button .**


Fig. 31

Fig. 32
TACTILE PROGRAMMABLE PUSH BUTTONS

The four tactile buttons (**Fig. 1** ) are fully programmable using the programming software **VX IP Wizard**.

CONNECTION TERMINALS SIGNALS


OUT2	Relay 2	Max 35Vdc 50mA
OUT2	C & NO dry contacts	
OUT1	Relay 1	
OUT1	C & NO dry contacts	
GNDI	Ground for IN1 and IN2 inputs	
IN2	Active low input 2	
IN1	Active low input 1	
GNDI	RS-485 connection	
B		
A		
GND	12 Vdc - 650mA power supply input.	
+12V	This is not used if the videophone is connected to a POE Switch or Router	

TECHNICAL SPECIFICATIONS

Housing and mounting: 6700 Series - Surface

Push buttons: 4

Programming: Through touchscreen or PC VX IP Wizard software

Power consumption: Stand-by: 400mA
Operating: 600mA

Working voltage: 12Vdc - 650mA or POE

Art. 6798 7" hands free touch screen videophone for IPure system

INTERNAL WEB SERVER

The device allows you to access some features through PC or tablet and smartphone.

FIRST ACCESS

1. Open a browser on a PC, tablet or smartphone and enter the complete IP address of the device in the address bar:

I.E: <http://192.168.123>

2. Insert the default credentials:

Username: admin

Password: videx

3. Click/tap **Login**

NOTE:

- The client (PC, smartphone, tablet) must be on the same LAN/WLAN network.
- To find the device IP address, from the home screen, tap **Menu** , then **About**.
- [https](#) protocol is not supported.

The following options are available:

- **Camera Screenshot**
- **Camera Video Recording**
- **Intercom Audio Recording**
- **Change Password**
- **Application Log**
- **Logout**

CAMERA SCREENSHOT, VIDEO RECORDING AND INTERCOM AUDIO RECORDING

Displays screenshots, video recordings, and audio files captured by the device.

These are the same events that can be viewed in the Event log menu on the device.

For each event the name of the device, date and time of the event is indicated.

Full screen mode, downloads and other features depend on browser.

Click/tap **Back** to return to menu.

CHANGE PASSWORD

Allows you to personalize the access password.

1. Enter the current password, the new password and confirm.

2. Click/tap **Submit** to confirm

or

Click/tap **Back** to return to menu without changing the password.

 **To reset the password to default see "Reset Web Page Password" on page 9.**
Username is always the same (admin).

APPLICATION LOG

Allows you to download a log file of the device for diagnostic purposes.

LOGOUT

Logout from the web server.

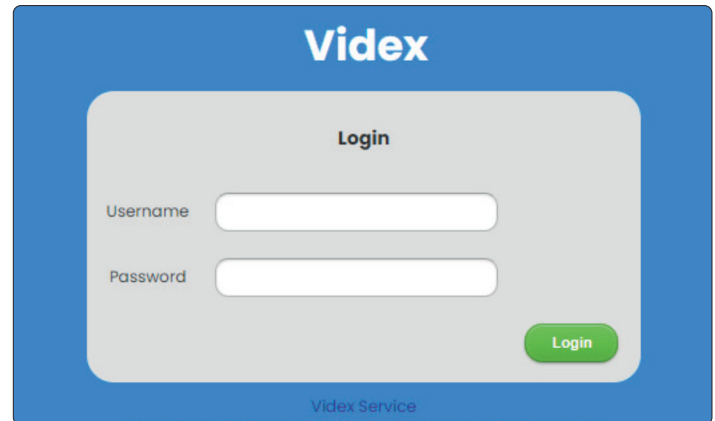


Fig. 33

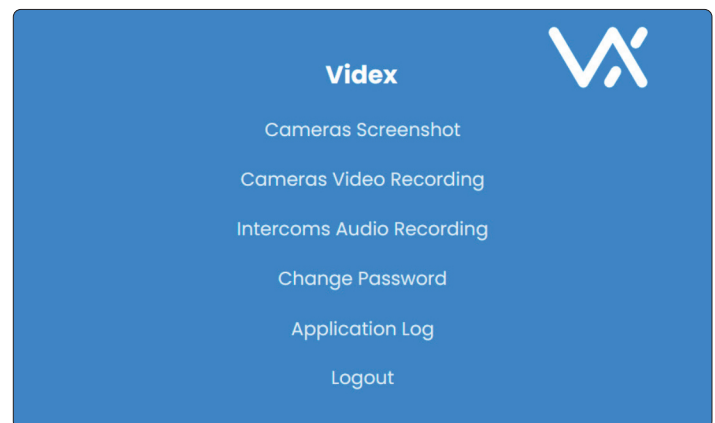


Fig. 34

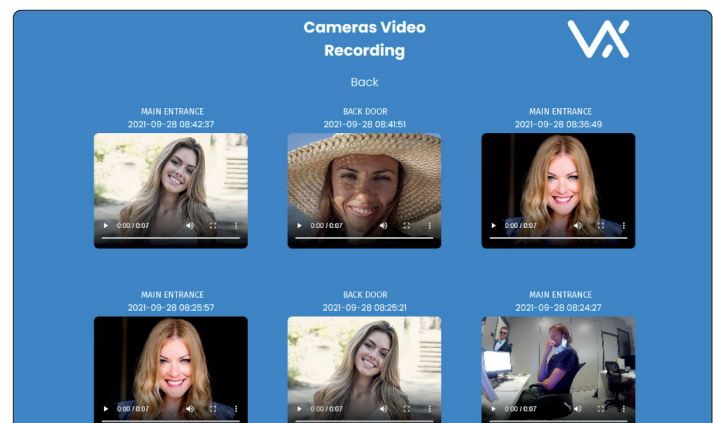


Fig. 35

WALL MOUNTING INSTRUCTIONS

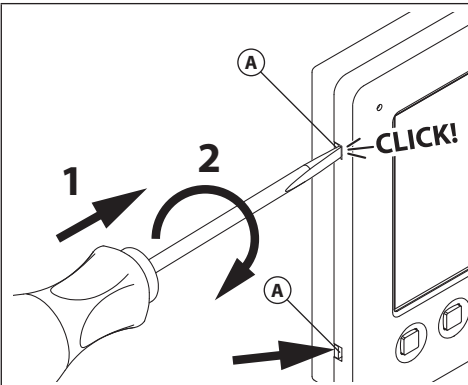


Fig. 1

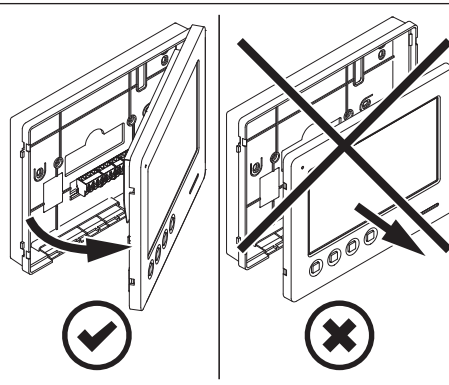


Fig. 2

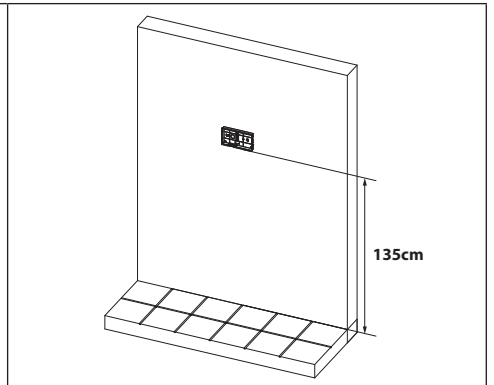


Fig. 3

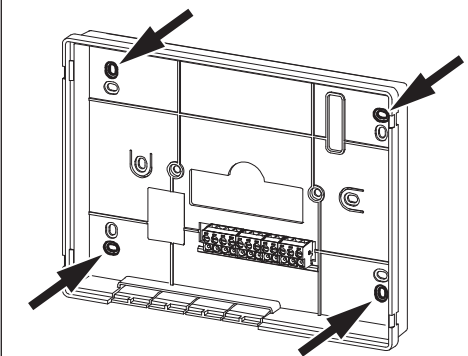


Fig. 4

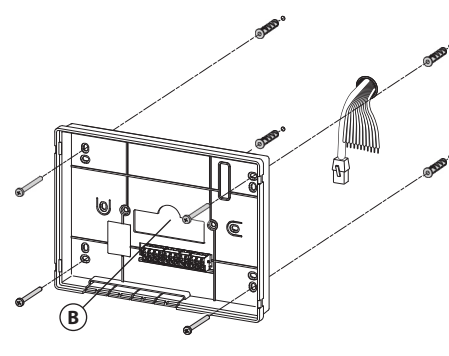


Fig. 5

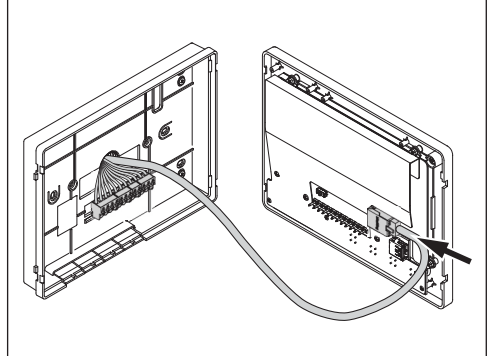


Fig. 6

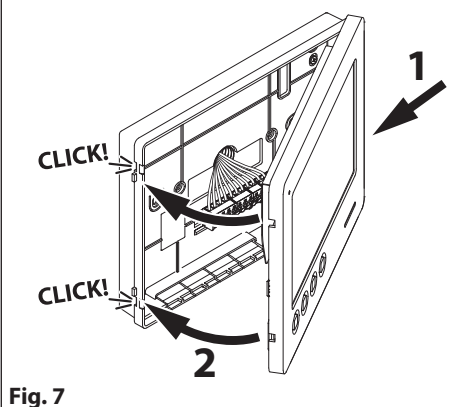


Fig. 7

⚠ WARNING: Remember to remove the mains before installing the videomonitor.

1. Remove the cover inserting a 5.5mm flat screwdriver into both the clips (A) then rotate clockwise until you listen a "CLICK!" (Fig. 1).
2. Pull outwards the left part of the cover. **Don't pull the cover straight** (Fig. 2).
3. Put the cover **in a horizontal position** on the wall leaving approx 135cm between the lower side of the back cover and the finished floor (Fig. 3).
4. Mark the point for the fixing holes remembering that the wires must be fed through the hole (B) (Fig. 4).
5. Make the holes, insert the wall plugs and fix the back cover with the screws feeding the wires into the hole (B) (Fig. 5).
6. Connect the wires to the terminals following the provided installation diagram and the Ethernet cable to LAN connector (Fig. 6).
7. Close the unit: first hook in the right part and then the left part until you hear a "CLICK!" (Fig. 7).

ENG DISPOSAL

In accordance with the Legislative Decree no. 49 of 14 March 2014 "Implementation of the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE)".

The crossed-out bin symbol on the equipment or on the packaging indicates that when the product reaches the end of its lifetime, it must be collected separately from mixed municipal waste. The user must, therefore, dispose of the equipment at the end of its lifetime in the suitable waste collection centres or bring it to the retailer during the purchase of a new equipment of equivalent type at the ratio of one-to-one. Furthermore, the user is allowed to dispose of the WEEEs of very small size (domestic appliances without any external dimension exceeding 25 cm (9.84 inches) for free to the retailers, without any purchase obligation. The correct waste disposal of the WEEEs contributes to their reuse, recycling and recovery and avoids potential negative effects on the environment and human health due to the possible presence of dangerous substances within them.



ITA SMALTIMENTO

Ai sensi del Decreto Legislativo 14 marzo 2014, n° 49 "Attuazione della direttiva 2012/19/UE sui rifiuti di apparecchiature elettriche ed elettroniche (RAEE)".

Il simbolo del cassonetto barrato riportato sull'apparecchiatura o sulla sua confezione indica che il prodotto alla fine della propria vita utile deve essere raccolto separatamente dagli altri rifiuti urbani misti. L'utente dovrà, pertanto, conferire l'apparecchiatura giunta a fine vita presso gli idonei centri di raccolta differenziata oppure riconsegnarla al rivenditore al momento dell'acquisto di una nuova apparecchiatura di tipo equivalente, in ragione di uno a uno. L'utente ha, inoltre, la possibilità di conferire gratuitamente presso i distributori, senza alcun obbligo di acquisto, per i RAEE di piccolissime dimensioni (per le apparecchiature di tipo domestico con nessuna dimensione esterna superiore a 25 cm).

L'adeguata raccolta differenziata dei RAEE contribuisce al loro riutilizzo, riciclaggio e recupero ed evita potenziali effetti negativi sull'ambiente e sulla salute umana dovuti alla eventuale presenza di sostanze pericolose al loro interno.

FRA ÉLIMINATION

Conformément au décret législatif n° 49 du 14 mars 2014 relatif à l'« Application de la directive 2012/19 / UE relative aux déchets d'équipements électriques et électroniques (DEEE) ».

Le symbole de la poubelle barrée sur l'équipement ou sur son emballage indique que le produit en fin de vie utile doit être collecté séparément des autres déchets municipaux en mélange. L'utilisateur doit donc remettre l'équipement en fin de vie aux centres de collecte appropriés ou le restituer au revendeur lors de l'achat d'un nouveau type d'équipement équivalent, dans le rapport de un à un. De plus, l'utilisateur a la possibilité de conférer gratuitement aux distributeurs, sans aucune obligation d'achat, de très petits DEEE (pour les appareils ménagers sans dimensions extérieures supérieures à 25 cm). La collecte séparée adéquate des DEEE contribue à leur réutilisation, leur recyclage et leur valorisation et évite les éventuels effets négatifs sur l'environnement et la santé humaine en raison de la présence possible de substances dangereuses dans ceux-ci.

SPA ELIMINACIÓN

De conformidad con el Decreto legislativo n. 49 de 14 de marzo 2014 "Aplicación de la Directiva 2012/19/UE relativa a residuos de aparatos eléctricos y electrónicos (RAEE)".

El símbolo del contenedor tachado indicado sobre los aparatos o sobre los embalajes señala que el producto al final de su vida útil debe ser recogido separadamente de otros residuos municipales mezclados. Por tanto, el usuario deberá conferir los aparatos al final de su vida útil en los apropiados centros de recogida selectiva o devolverlos al revendedor al momento de la compra de nuevos aparatos equivalentes, en una relación de uno a uno. Además, el usuario tiene la posibilidad de entregar sin cargo a los distribuidores, sin ninguna obligación de compra, los RAEEs muy pequeños (para electrodomésticos sin dimensiones externas superiores a 25 cm).

La recogida selectiva apropiada de los RAEEs contribuye a su reutilización, reciclaje y valorización y evita potenciales impactos negativos sobre el medio ambiente y la salud humana debidos a la posible presencia de sustancias peligrosas dentro de ellos.

NLD VERWIJDERING

In overeenstemming met het Wetsbesluit nr. 49 van 14 maart 2015 "Implementatie van de Richtlijn 2012/19/EU inzake afgedankte elektrische en elektronische apparaten (AEEA)".

Het doorgeslechte vuilnisbaksymbool op het apparaat of de verpakking geeft aan dat het product aan het einde van zijn levensduur niet samen met het gewone huisvuil weggegooid mag worden. De gebruiker moet het apparaat aan het einde van zijn levensduur inleveren bij een gepast inzamelpunt of de winkel waar hij een nieuw apparaat van een gelijksoortig type zal kopen. De gebruiker kan tevens AEEA's van een zeer klein formaat (huishoudapparaten met een buitenafmeting kleiner dan 25 cm (9,84 inch) gratis en zonder enige aankoopverplichting bij handelaars inleveren. Een juiste verwijdering van AEEA's draagt bij tot hergebruik, recycling en terugwinning, en voorkomt potentiële negatieve effecten op het milieu en de menselijke gezondheid door de mogelijke aanwezigheid van gevaarlijke stoffen.

POR ELIMINAÇÃO

De acordo com o Decreto Legislativo n.º 49 de 14 de março de 2014 "Implementação da Diretiva 2012/19/UE relativa aos resíduos de equipamentos elétricos e eletrónicos (REEE)".

O símbolo do caixote do lixo riscado no equipamento ou na embalagem indica que quando o produto atinge o fim da sua vida útil, deve ser recolhido separadamente dos resíduos urbanos mistos. O utilizador deve, portanto, eliminar o equipamento no final da sua vida útil nos centros de recolha de resíduos adequados ou levá-lo ao vendedor durante a compra de um novo equipamento de tipo equivalente, na proporção de um para um. Além disso, o utilizador pode eliminar gratuitamente os REEE de dimensões muito reduzidas aos vendedores, sem qualquer obrigação de compra. (só aparelhos domésticos sem qualquer dimensão externa que exceda 25 cm, ou seja 9,84 polegadas). A correta eliminação dos REEE contribui para a sua reutilização, reciclagem e recuperação e evita potenciais efeitos negativos sobre o ambiente e a saúde humana devido à possível presença de substâncias perigosas no seu interior.

MANUFACTURER FABBRICANTE FABRICANT FABRICANTE FABRIKANT FABRICANTE المصنعة لشركة	VIDEX ELECTRONICS S.P.A. Via del Lavoro, 1 63846 Monte Giberto (FM) Italy Tel (+39) 0734 631669 Fax (+39) 0734 632475 www.videx.it - info@videx.it	
CUSTOMER SUPPORT SUPPORTO CLIENTI SUPPORTS CLIENTS ATENCIÓN AL CLIENTE KLANTENDIENST APOIO AO CLIENTE خدمة العملاء	VIDEX ELECTRONICS S.P.A. www.videx.it - technical@videx.it Tel: +39 0734-631669 Fax: +39 0734-632475	UK Customers only: VIDEX SECURITY LTD www.videxuk.com Tech Line: 0191 224 3174 Fax: 0191 224 1559
	Main UK office: VIDEX SECURITY LTD 1 Osprey Trinity Park Trinity Way LONDON E4 8TD Phone: (+44) 0370 300 1240 Fax: (+44) 020 8523 5825 www.videxuk.com marketing@videxuk.com	Northern UK office: VIDEX SECURITY LTD Unit 4-7 Chillingham Industrial Estate Chapman Street NEWCASTLE UPON TYNE - NE6 2XX Tech Line: (+44) 0191 224 3174 Phone: (+44) 0370 300 1240 Fax: (+44) 0191 224 1559
	Greece office: VIDEX HELLAS Electronics 48 Filolaou Str. 11633 ATHENS Phone: (+30) 210 7521028 (+30) 210 7521998 Fax: (+30) 210 7560712 www.videx.gr videx@videx.gr	Danish office: VIDEX DANMARK Hammershusgade 15 DK-2100 COPENHAGEN Phone: (+45) 39 29 80 00 Fax: (+45) 39 27 77 75 www.videx.dk videx@videx.dk
	Benelux office: NESTOR COMPANY NV E3 laan, 93 B-9800 Deinze Phone: (+32) 9 380 40 20 Fax: (+32) 9 380 40 25 www.nestorcompany.be info@nestorcompany.be	Dutch office: NESTOR COMPANY BV Business Center Twente (BCT) Grotestraat, 64 NL-7622 GM Borne www.nestorcompany.be info@nestorcompany.be



The product is CE marked demonstrating its conformity and is for distribution within all member states of the EU with no restrictions. This product follows the provisions of the European Directives 2014/30/EU (EMC); 2014/35/EU (LVD); 2011/65/EU (RoHS); CE marking 93/68/EEC.

Le produit est marqué CE à preuve de sa conformité et peut être distribué librement à l'intérieur des pays membres de l'union européenne UE.
 Ce produit est conforme aux directives européennes 2014/30/EU (EMC) ; 2014/35/EU (LVD) ; 2011/65/EU (RoHS); marquage CE 93/68/EEC.

Het product heeft de CE-markering om de conformiteit ervan aan te tonen en is bestemd voor distributie binnen de lidstaten van de EU zonder beperkingen. Dit product volgt de bepalingen van de Europese Richtlijnen 2014/30/EU (EMC); 2014/35/EU (LVD); 2011/65/EU (RoHS); CE-markering 93/68/EEC.

يحمل المنتج علامة CE لإثبات مطابقتها لمتطلبات الاتحاد الأوروبي.
 هذا المنتج متوافق مع توجيهات الاتحاد الأوروبي 2014/30/UE (EMC)؛ 2014/35/UE (LVD)؛ 2011/65/UE (RoHS)؛ علامة لائحة 93/68/EEC.

Il prodotto è marchiato CE a dimostrazione della sua conformità e può essere distribuito liberamente all'interno dei paesi membri dell'Unione Europea UE.
 Questo prodotto è conforme alle direttive Europee: 2014/30/UE (EMC); 2014/35/UE (LVD); 2011/65/UE (RoHS); marcatura CE 93/68/EEC.

El producto lleva la marca CE que demuestra su conformidad y puede ser distribuido en todos los estados miembros de la unión europea UE.
 Este producto cumple con las Directivas Europeas 2014/30/EU (EMC); 2014/35/EU (LVD); 2011/65/EU (RoHS); marca CE 93/68/EEC.

O produto tem a marca CE que demonstra a sua conformidade e destina-se a distribuição em todos os estados membros da UE, sem restrições. Este produto segue as disposições das Diretivas Europeias 2014/30/UE (EMC); 2014/35/UE (LVD); 2011/65/UE (RoHS); marcação CE 93/68/EEC.

