

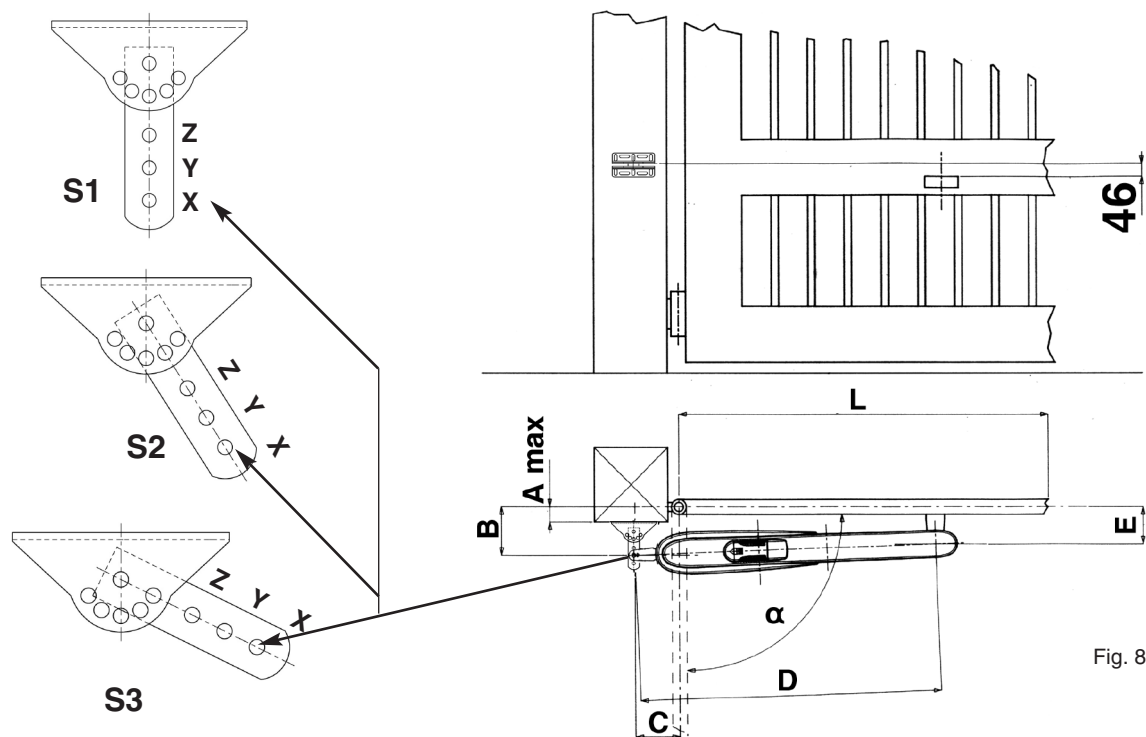


Fig. 8

Misure da rispettare per una corretta installazione
 Mesures de respecter pour une correcte installation
 Respect the measures for a correct installation
 Für eine korrekte Installation folgende Abmessungen beachten

L Min.-Max	α	A max	B	C	D	E	T sec	COL
1÷2	90°	0	100	100	765	90	13,5	S2-X
		20	100	100	765	90	13,5	S2-Y
		40	100	100	765	90	13,5	S3-X
		60	110	100	765	90	14	S3-Y
		80	140	110	765	115	17	S3-X
		100	160	110	765	115	18	S3-X
		120	180	110	765	115	19,5	S3-X
		140	210	110	765	115	21,5	S1-Z
		150	220	120	765	115	23	S1-Z
	110°	20	110	140	765	90	17	S1-Y

COL
 Attacco colonna
 Column attachment



Misure da rispettare CON 2 FERMI MECCANICI
 Mesures de respecter AVEC DEUX ARRET MECANQUES
 Respect the measures WITH 2 MECHANICAL STOPPERS
 Für eine korrekte Installation MIT ZWEI MECHANISCHE SPERRVORRICHTUNG

L Min.-Max	α	A max	B	C	D	E	T sec	COL
1÷2	90°	0	100	100	730	90	13,5	S2-X
		20	100	100	730	90	13,5	S2-Y
		40	100	100	730	90	13,5	S3-X
		60	110	100	730	90	14	S3-Z
		80	140	110	730	115	17	S3-X
		100	160	110	730	115	18	S3-X
		110	180	120	730	115	20	S1-Z
	110°	20	100	140	730	90	16	S2-Y